
12 x 16 FT

HWG - 058-2

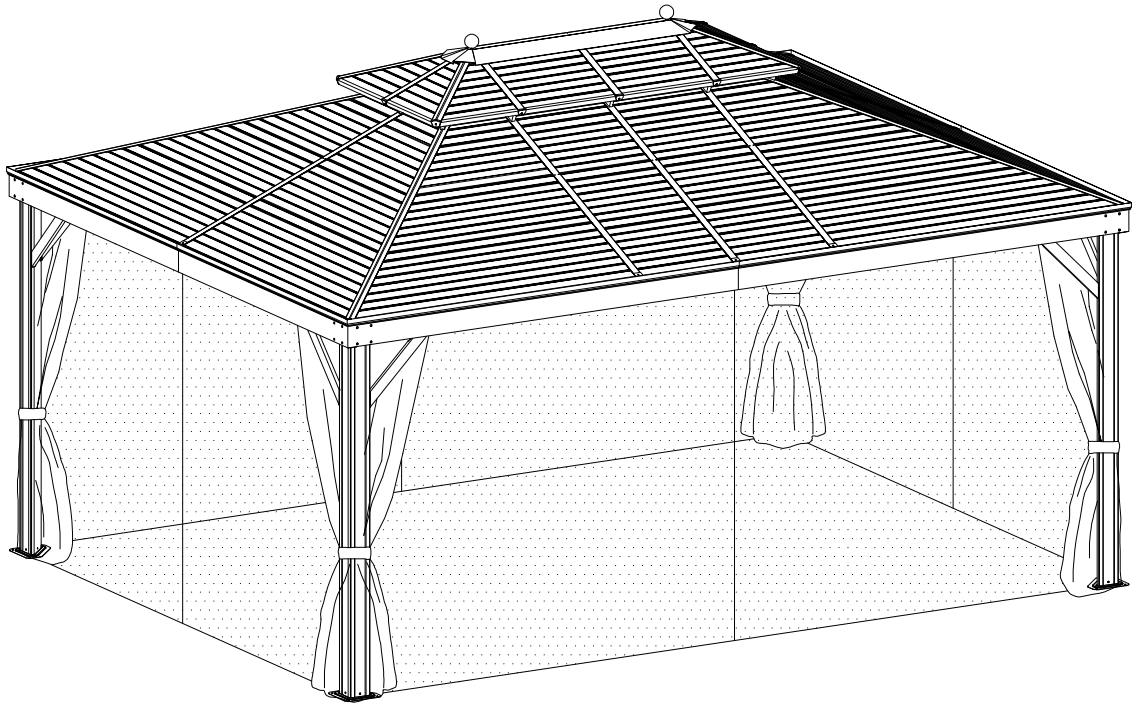





At least need 3person work together


REQUIRED TOOLS






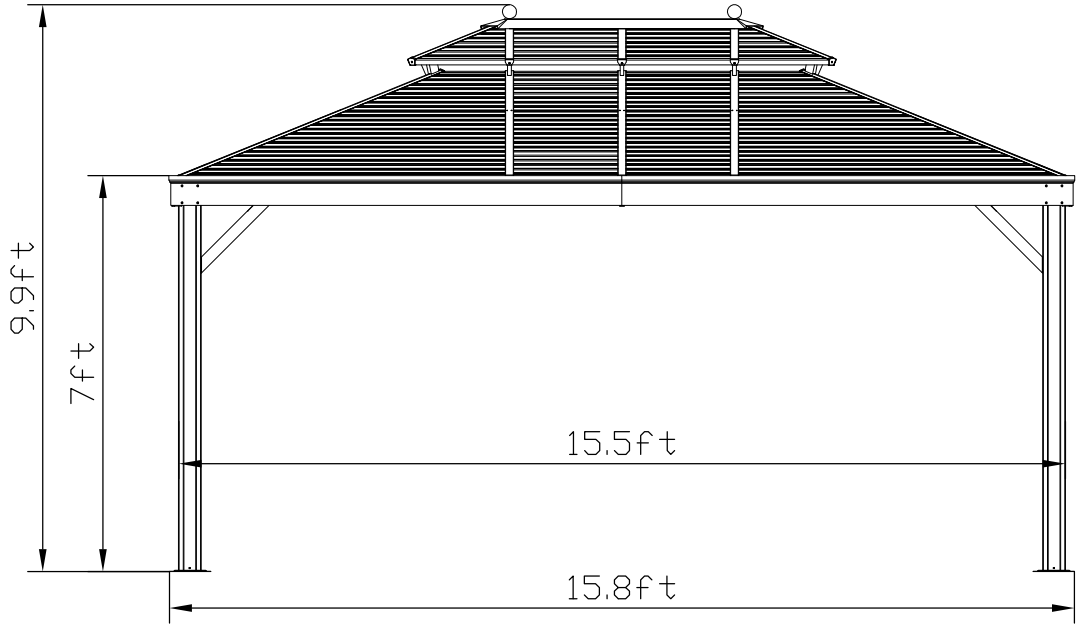



9.9ft
7ft
15.5ft
15.8ft

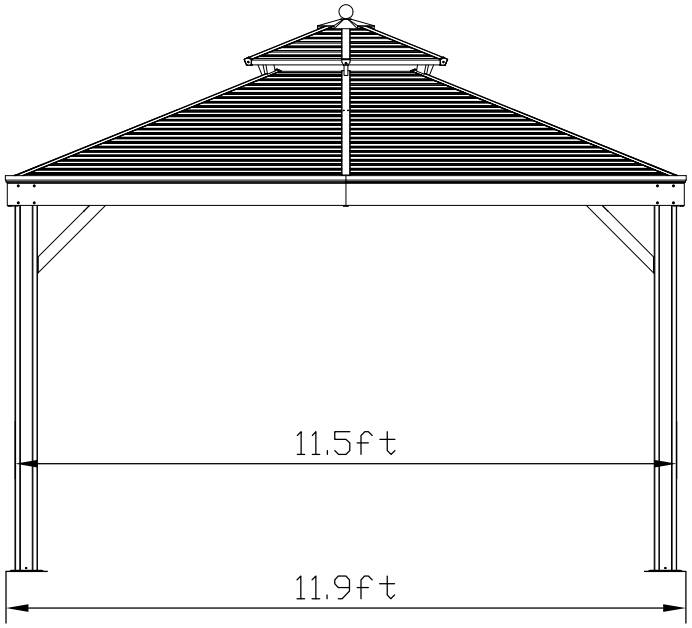
11.5ft
11.9ft

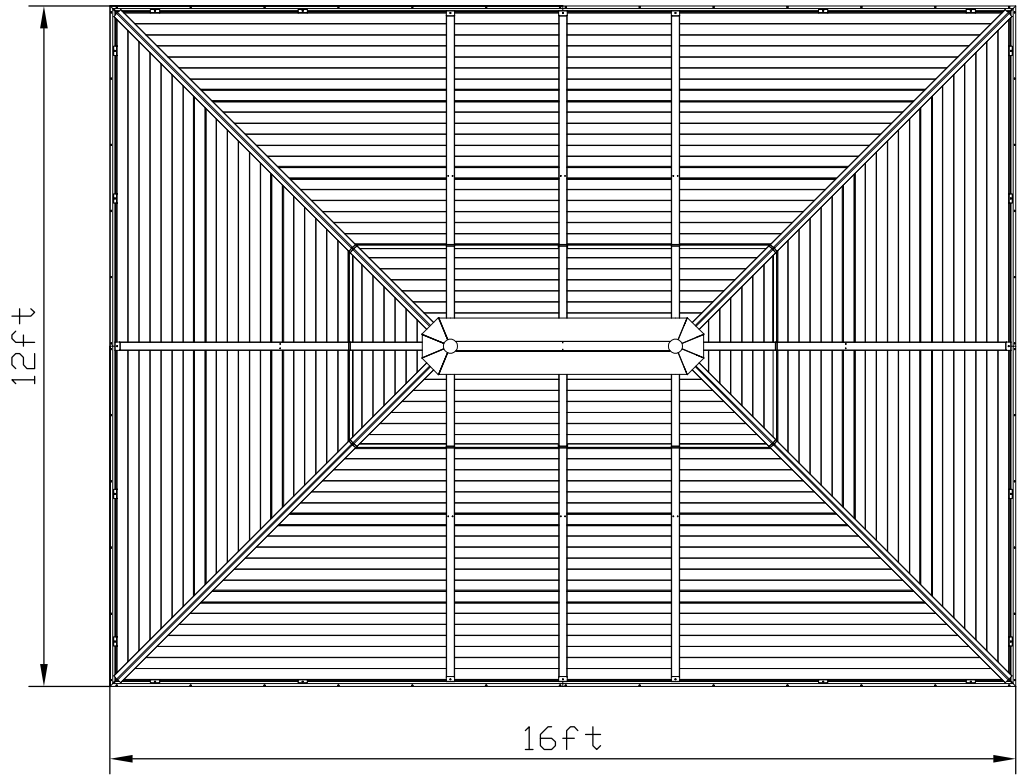

12ft
16ft



A x4




B x2



B1 x2



B2 x2



B3 x2



C x2



C1 x2



C2 x2



C3 x2



D x2



D1 x2



D2 x2



D3 x2



E x4




















U3 x4



















E1 x8




U4 x8

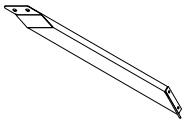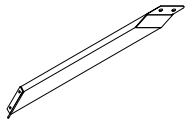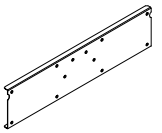 F x8	G x2	 G1 x4	 G2 x4
 G3 x2	 G4 x2		 H x4
 H1 x4	 H2 x4	 J x4	 K x4
 L x1	 M x1	 N x8	 N1 x8
 N2 x8	 N3 x4	 N4 x8	 P x4
 Q1 x4	 Q2 x4	 Q3 x4	 Q4 x4

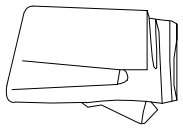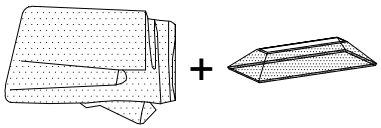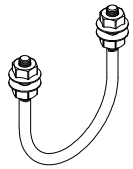
 Q x12	 Q5 x4	 Q6 x4	 R x4	 R1 x4  R2 x4
 S x4	 S1 x4	 S2 x4	 T x4	 T1 x4+x1
 U x128	 V x4	 W x16	 W1 x16	 Y x72
 Y1 x16	 Za x2	 x1  x1		 10 x1
 1 x291 M6x15	 2 x32	 3 x12 M5x12	 4 x16 ST4.8x12	
 5 x2	 6 x16 M5x6	 7 x76 ST4x8	 9 x12	

STEP 1

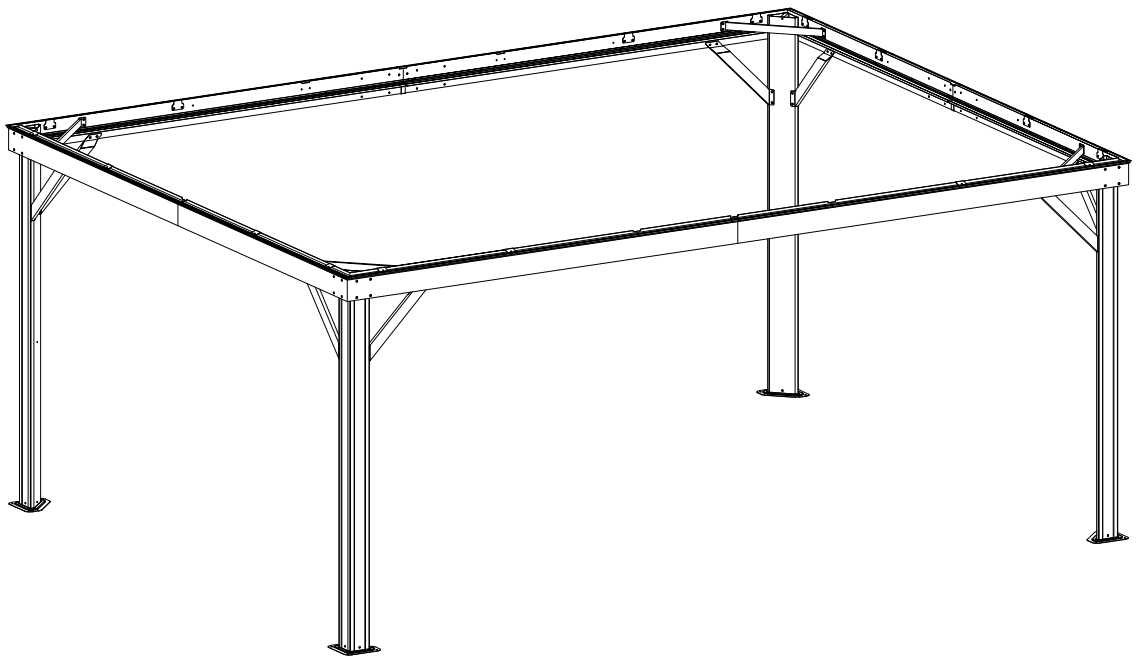


Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.


<1>



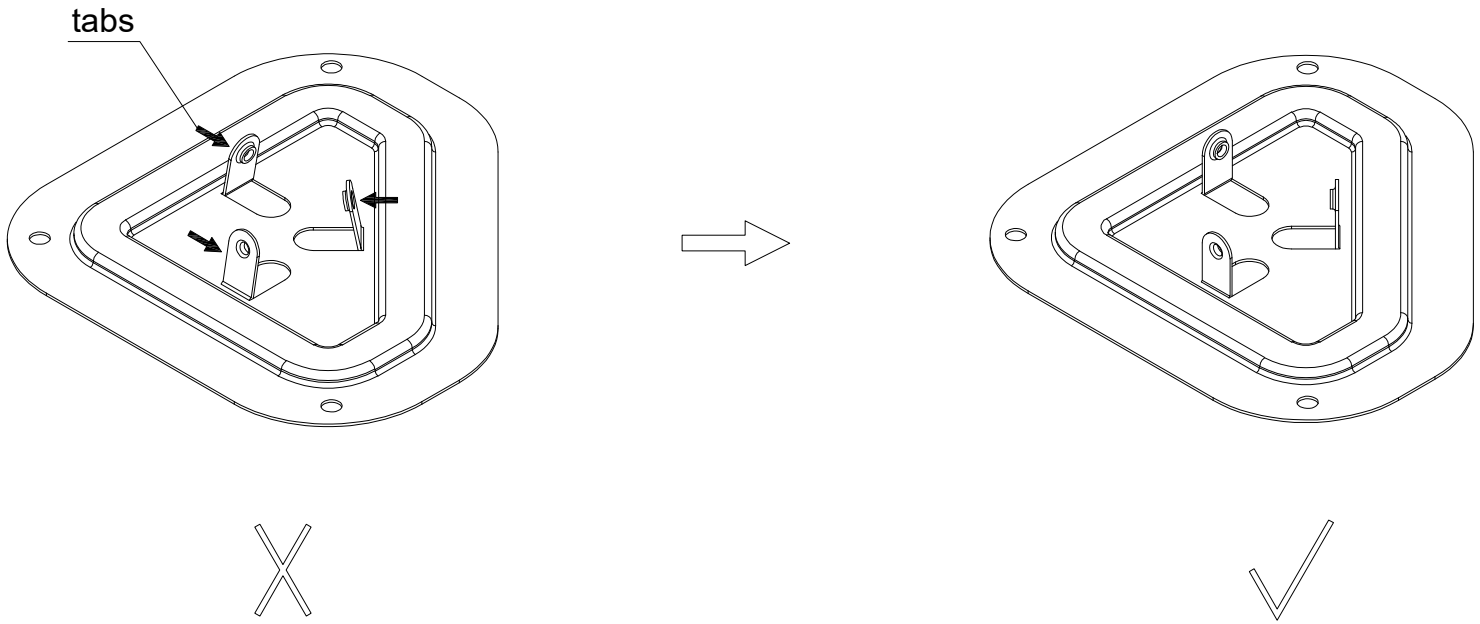


Tips: If the tabs on the base are crooked,you can use pliers to straighten them for easy screw installation

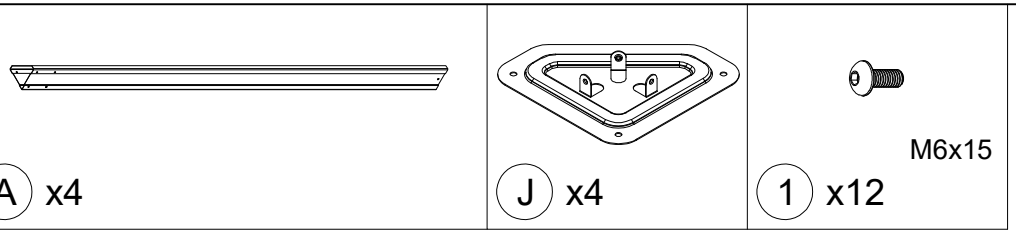


<2>

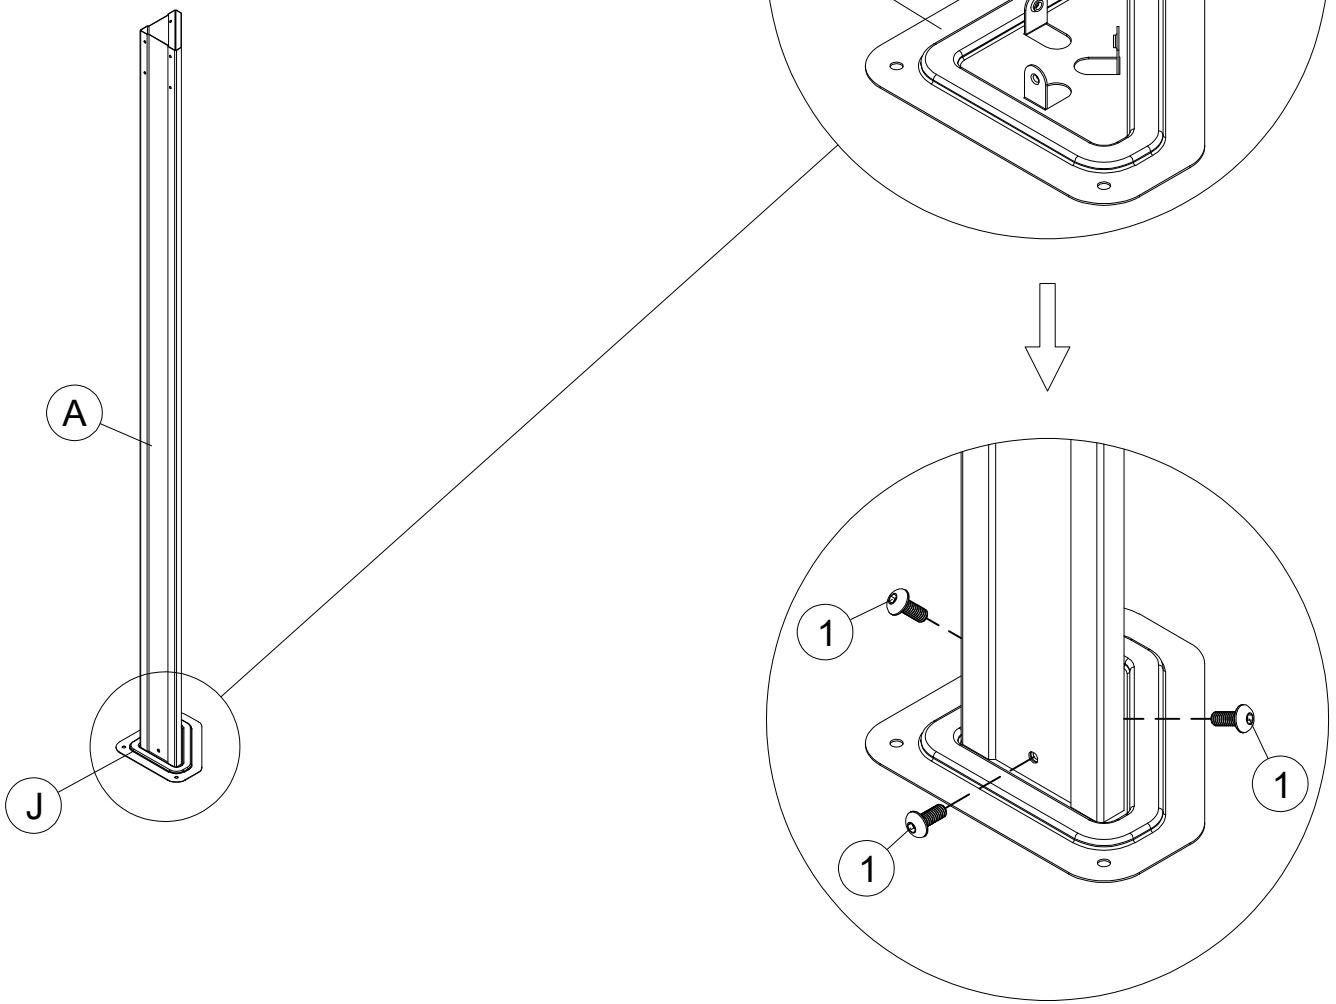

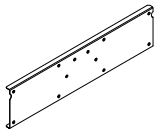
			 M6x15	 M5x12
B x2	B1 x2	P x2	1 x16	3 x4


<3>


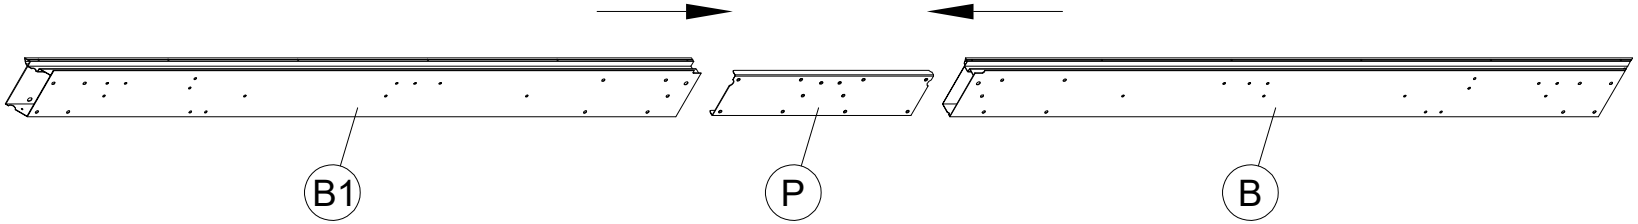


Tip 1: Use #1 screws to line up the holes in beam B1 and connector P, then connect beam B.
Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.


<4>

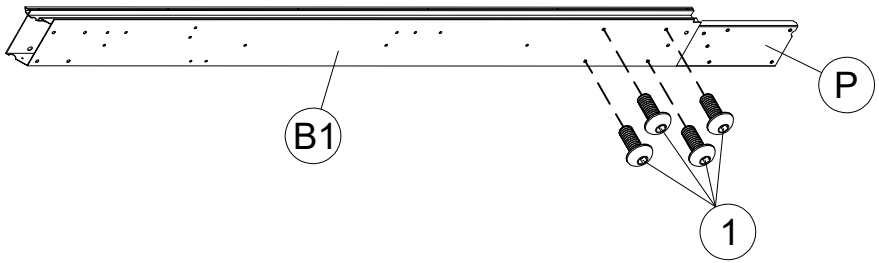

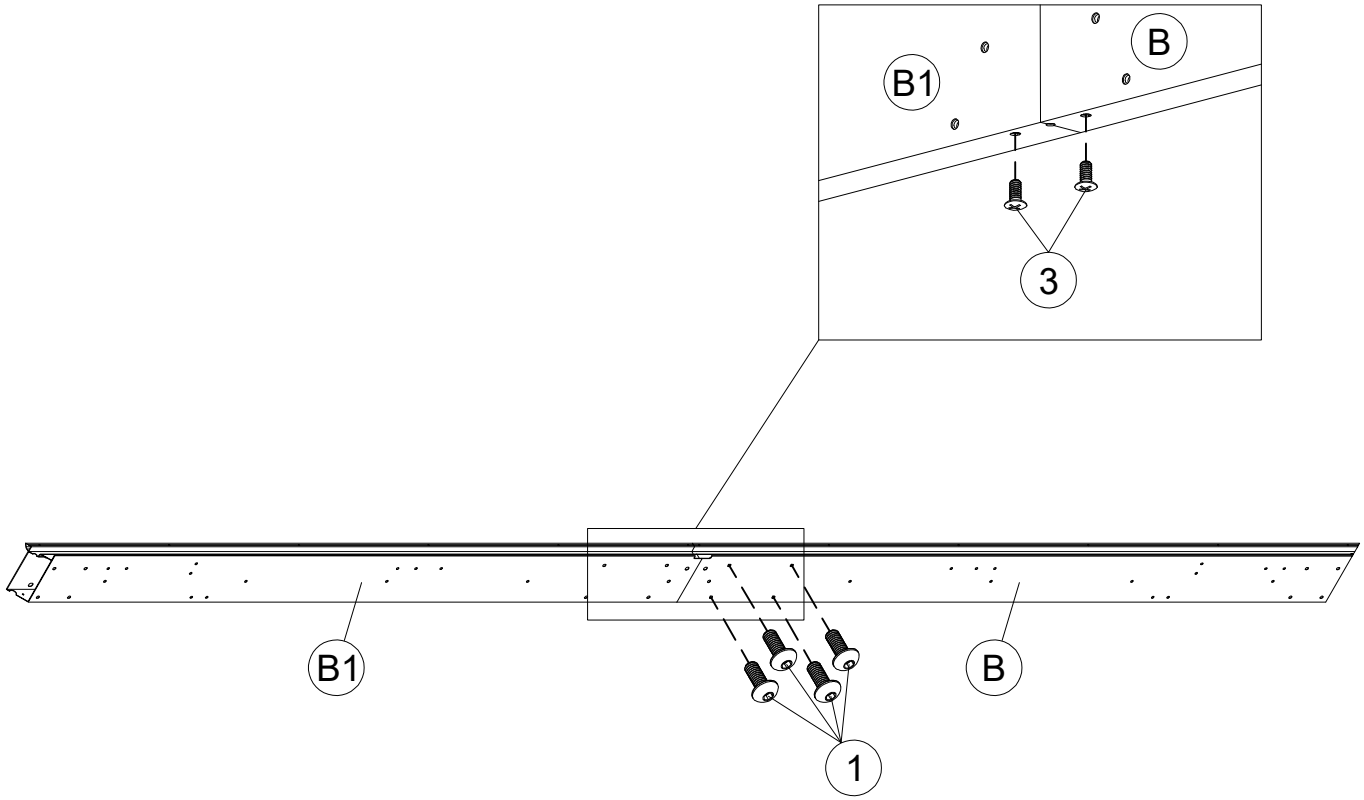

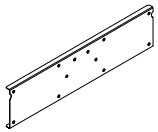
			 M6x15	 M5x12
B2 x2	B3 x2	P x2	1 x16	3 x4


<5>

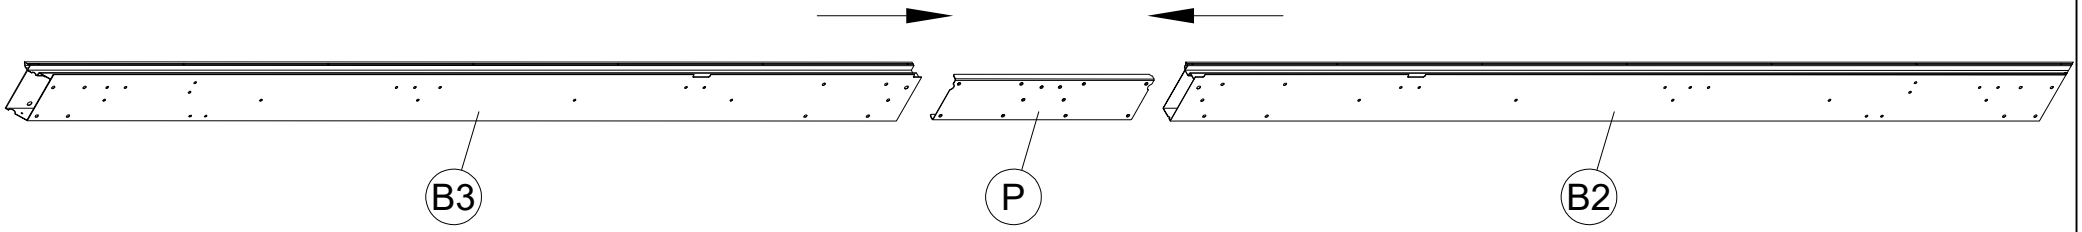


Tip 1: Use #1 screws to line up the holes in beam B3 and connector P, then connect beam B2.
Tip 2: When installing the screws, just hold them roughly in place and then tighten all the screws when you have the entire part connection aligned.

<6>

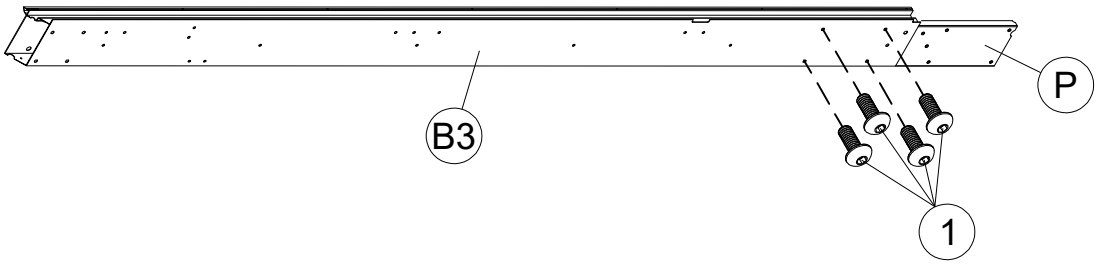


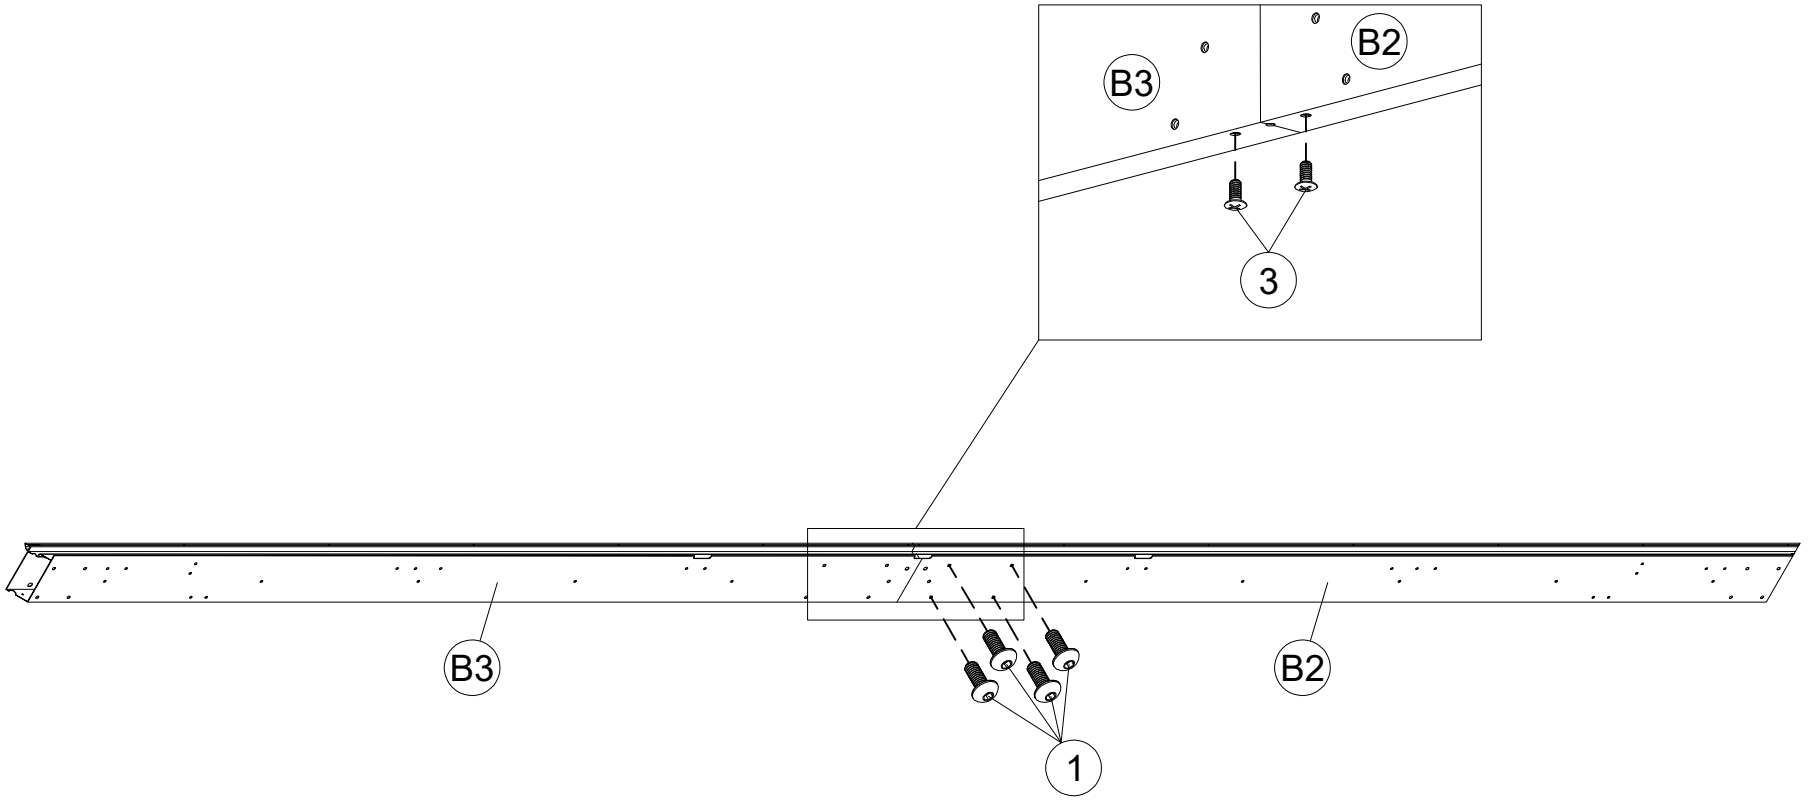





2 x32


<7>

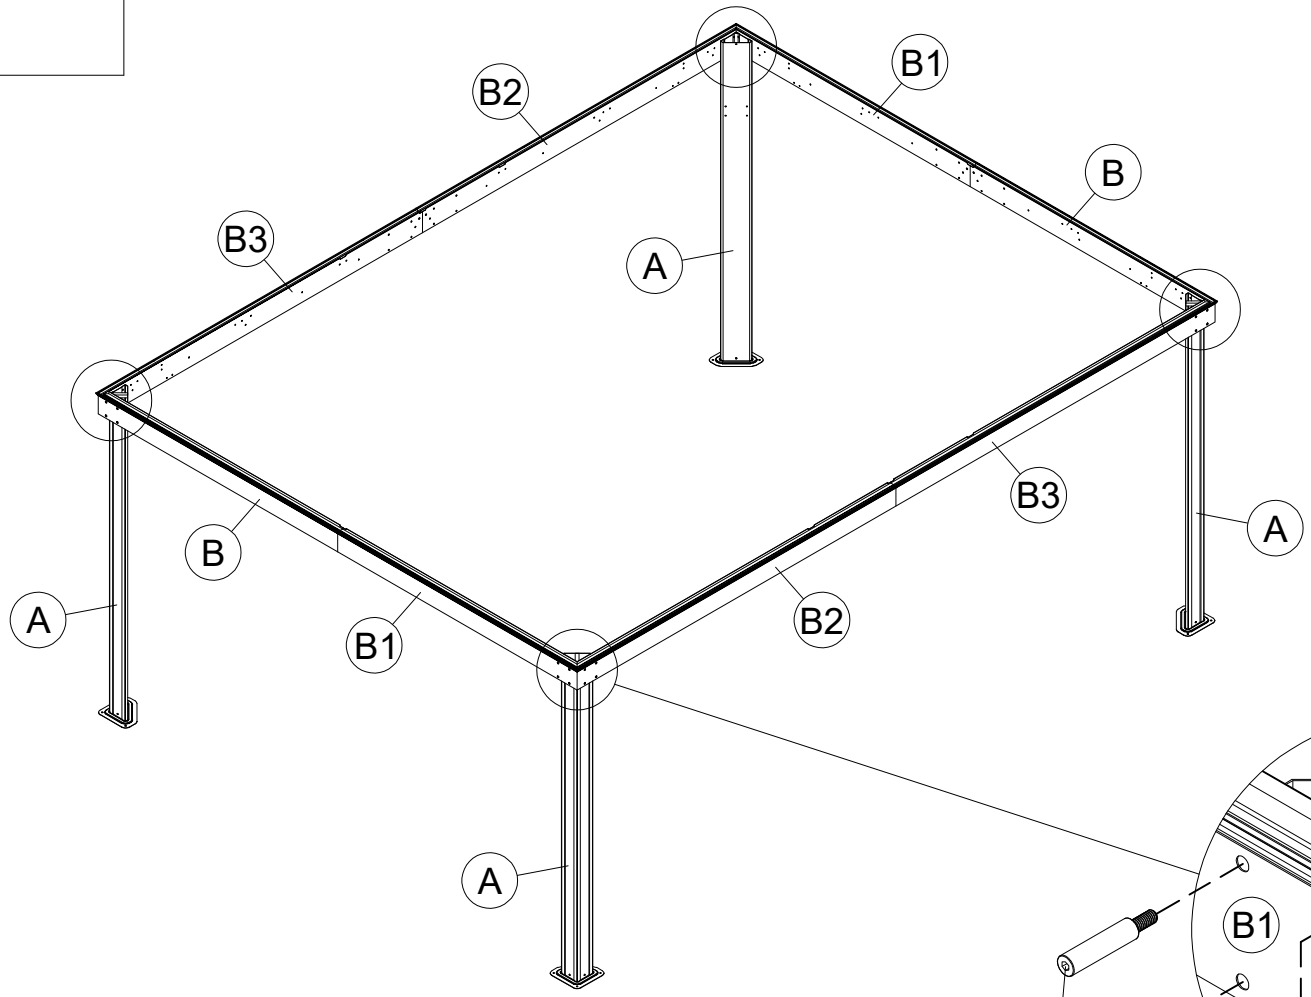

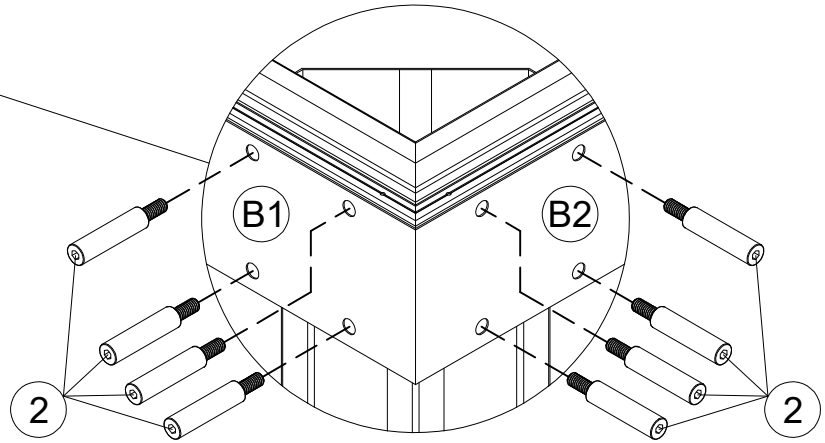

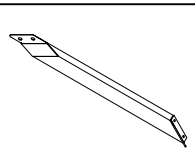

H1 x4

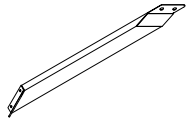


H2 x4





M6x15

1 x32

<8>

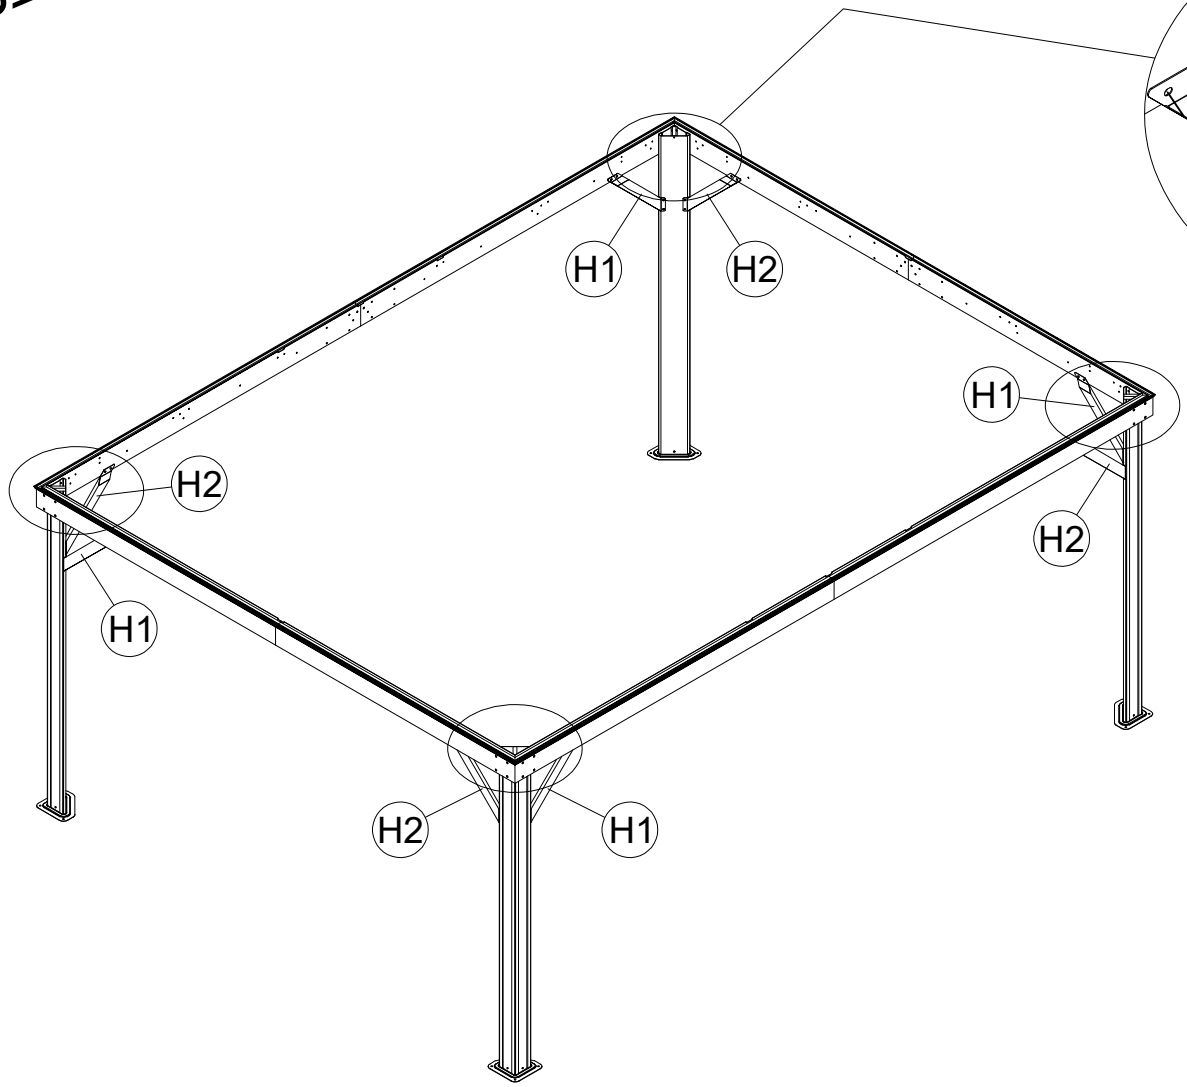

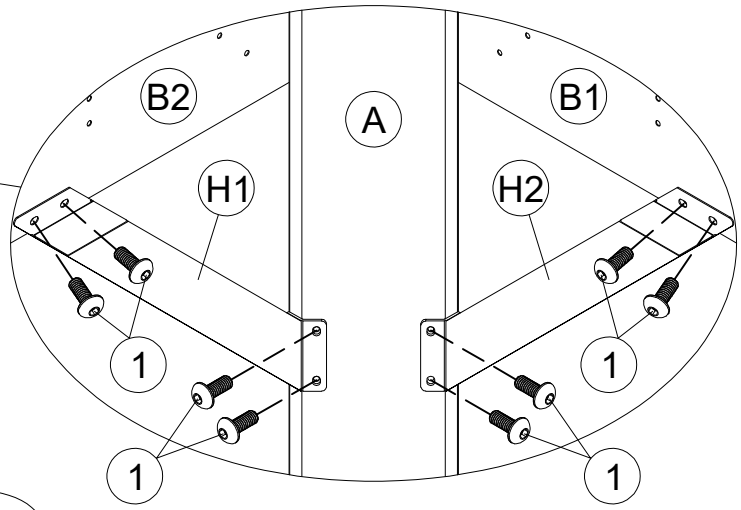

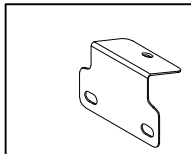


W1 x16




M6x15

1 x32


<9>

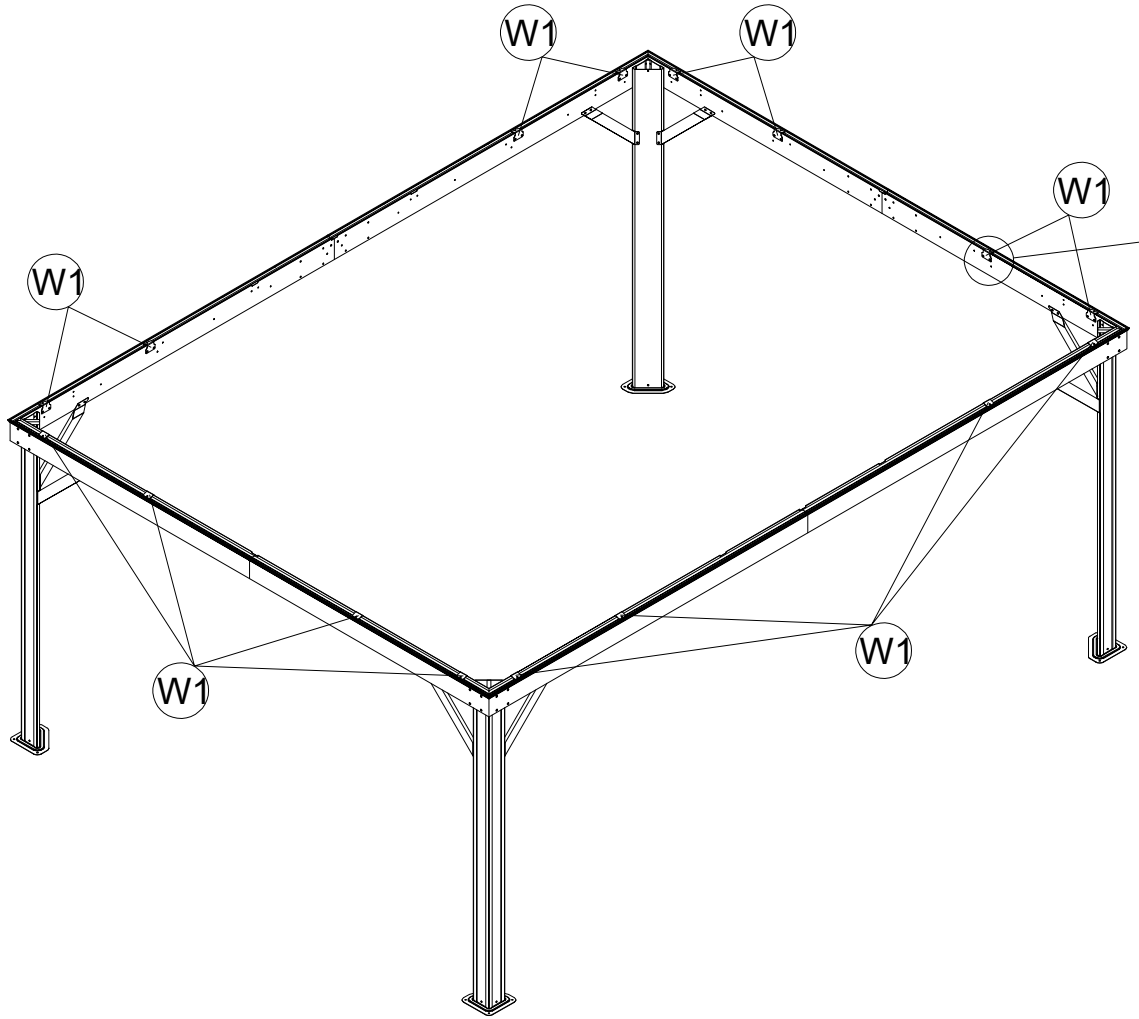


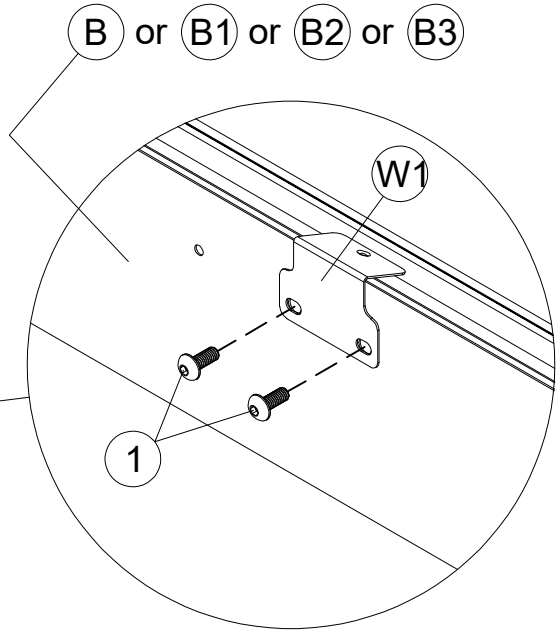


				 M6x15
C x2	C1 x2	C2 x2	C3 x2	1 x44


<10>

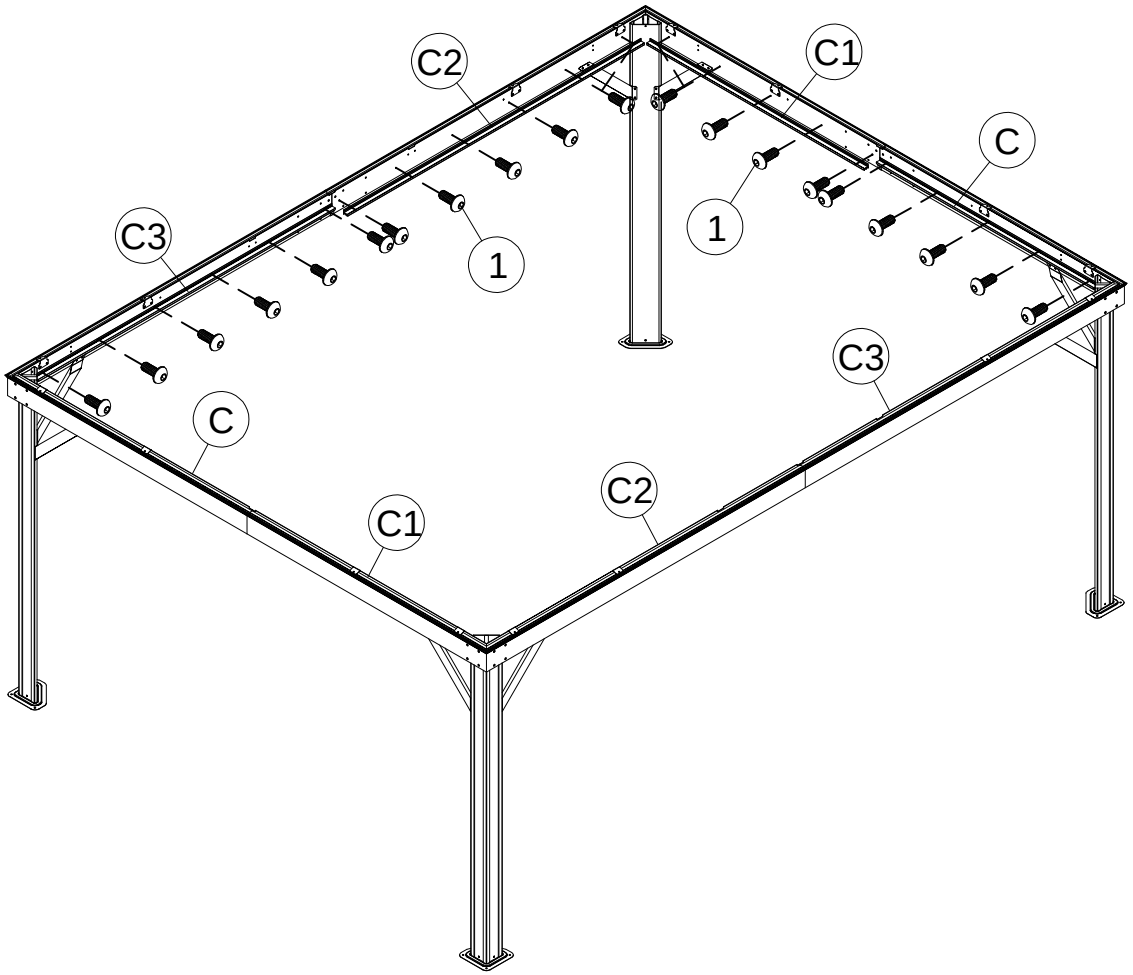



		
U x128	V x4	M5x12 3 x4


<11>

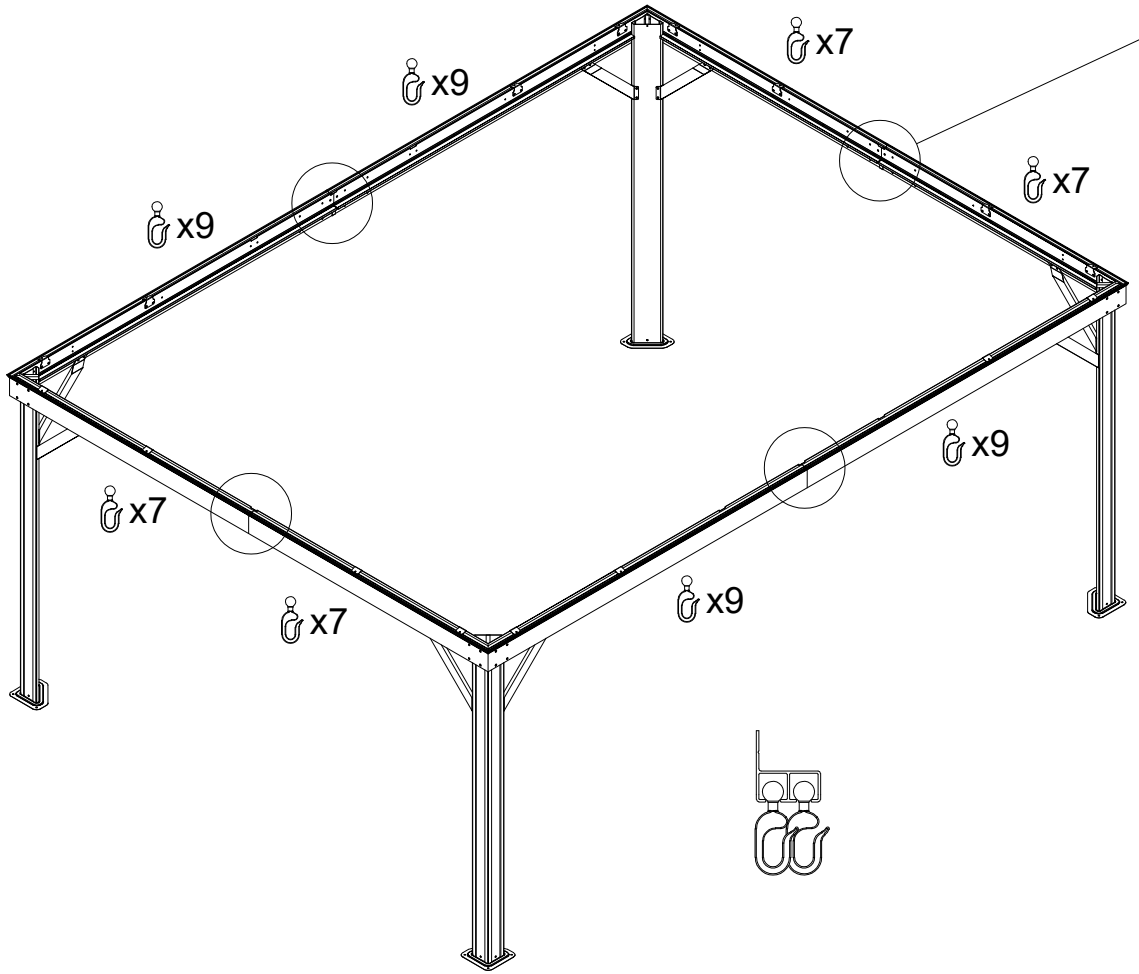

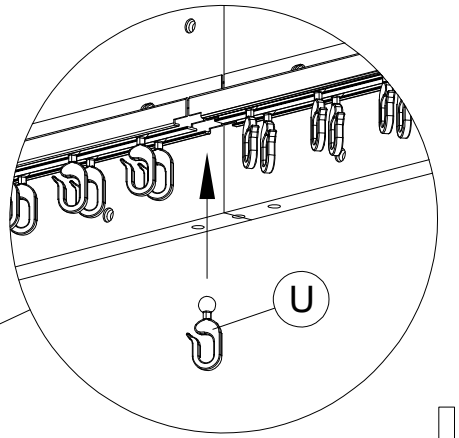

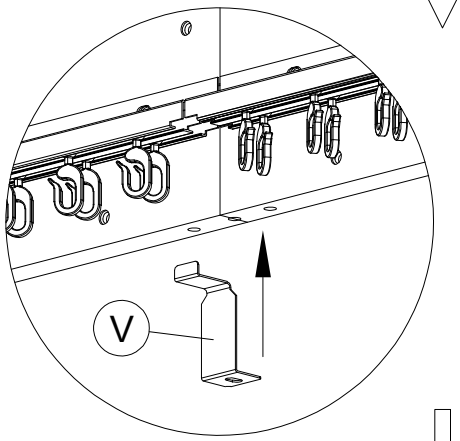

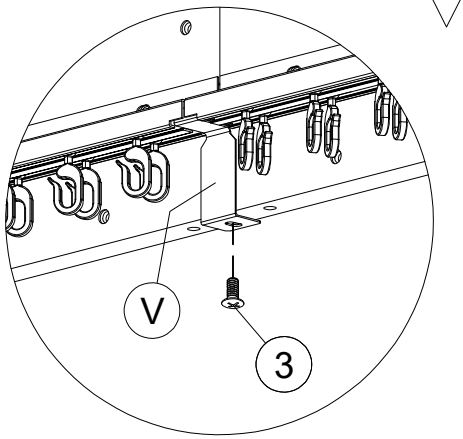




H x4




M6x15


1 x16

<12>

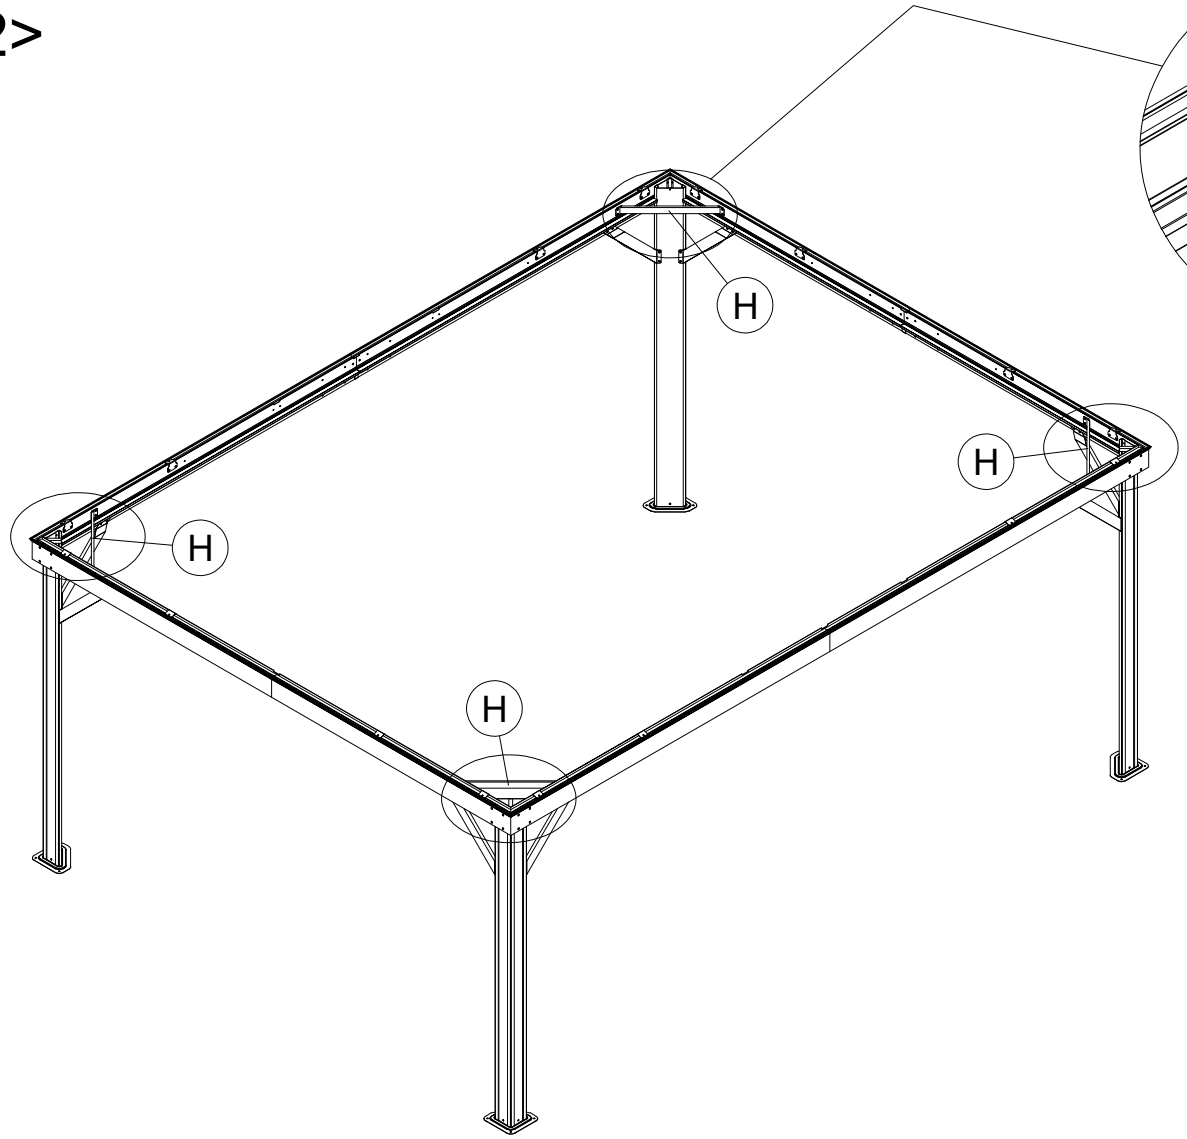

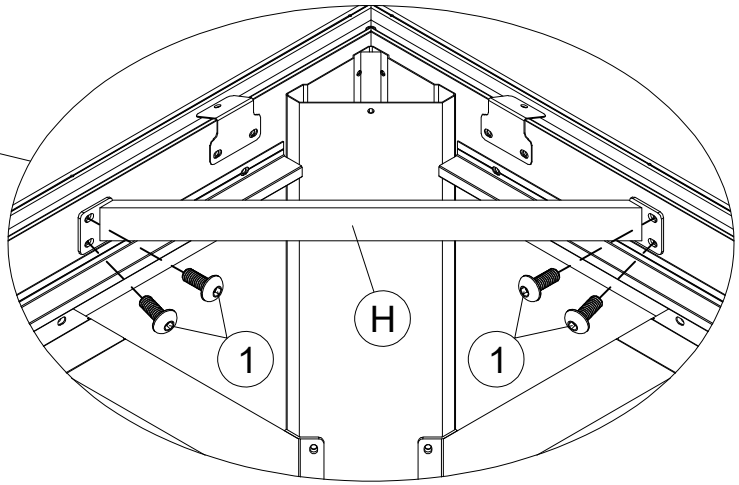


STEP 2

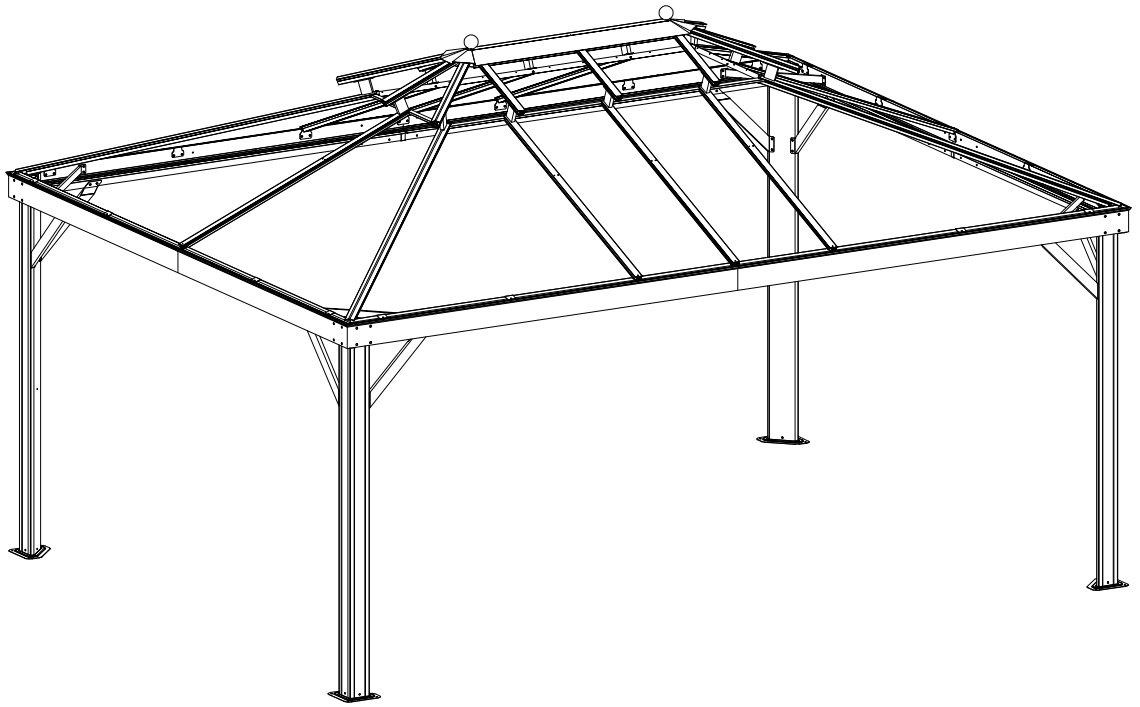

Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.




L x1




10 x1

<13>

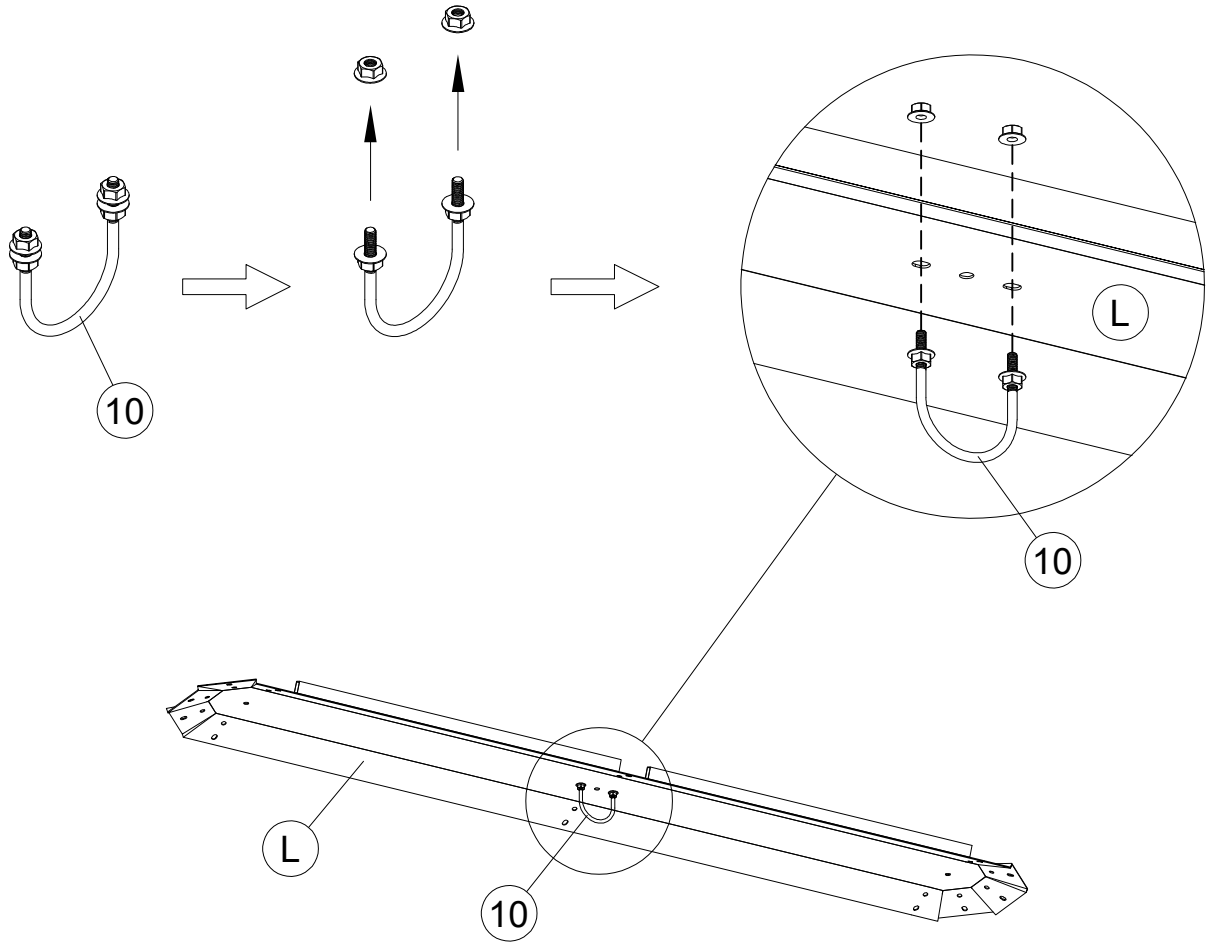

		
(E) x4	(U3) x4	M6x15 (1) x8

<14>

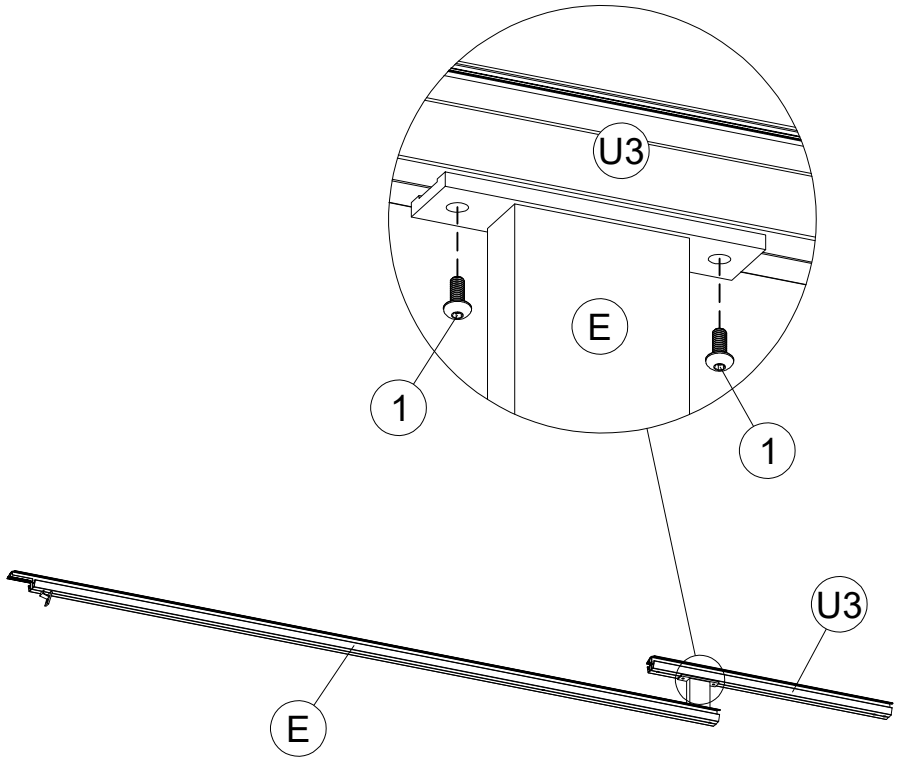




M6x15


1 x12


<15>

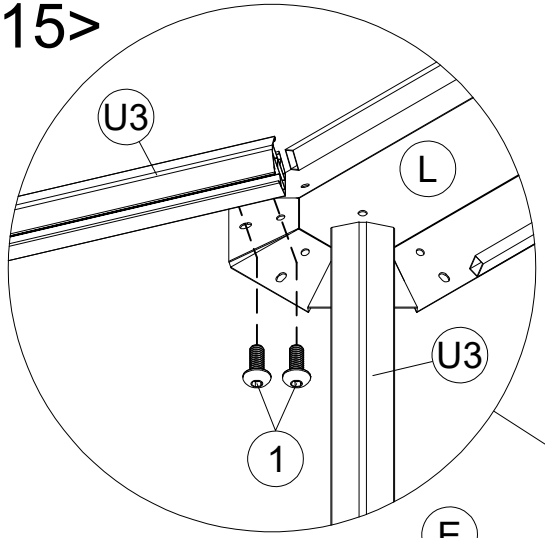

Note:


1. Let one person stand on the ladder to lift " L " and hold,and let others fasten the screws connecting both ends of " E+U3 ".
2. Please do not let go of holding " L " until all the " E+U3 " screws are installed.

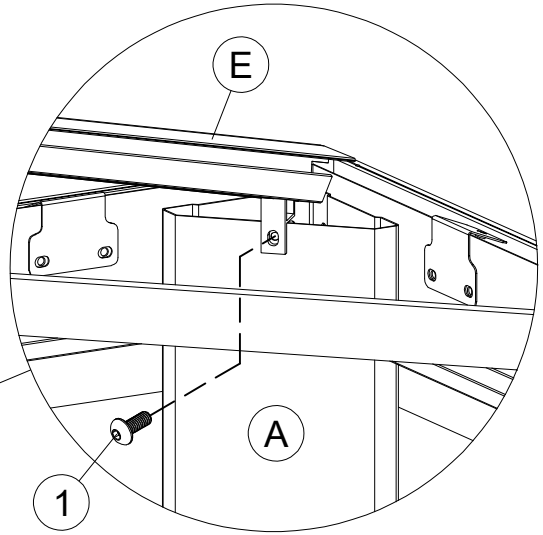

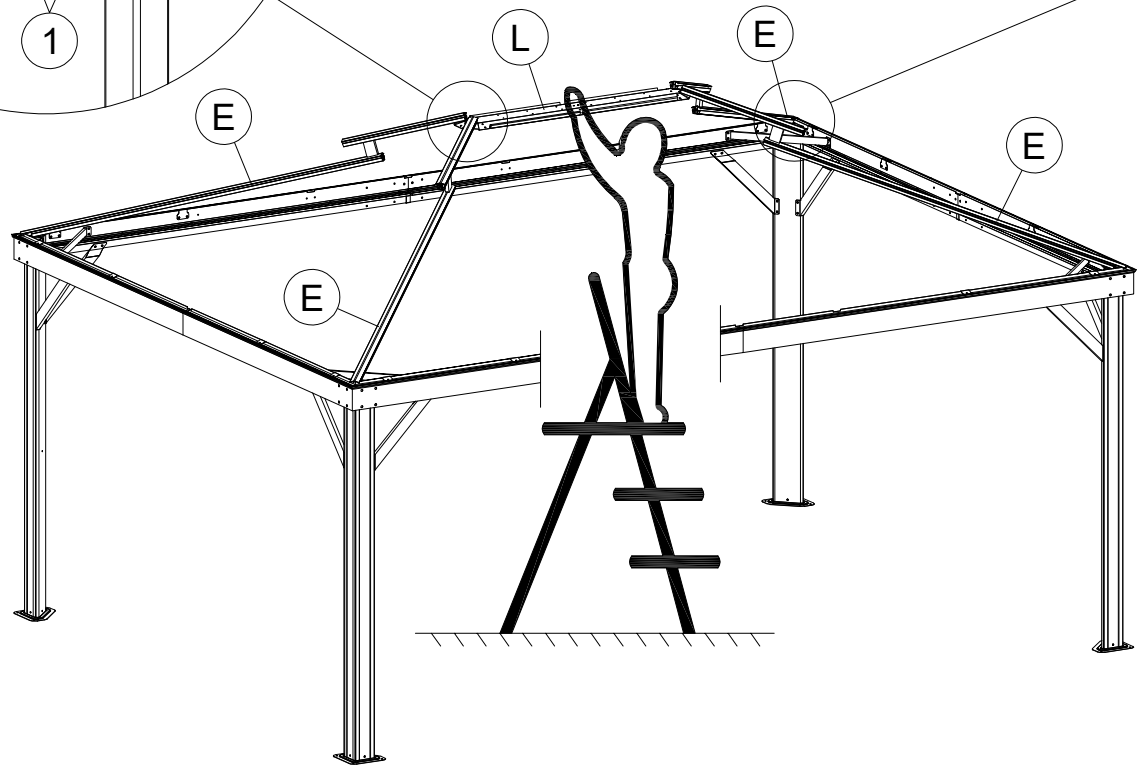

		
E1 x8	U4 x8	M6x15 1 x16

<16>

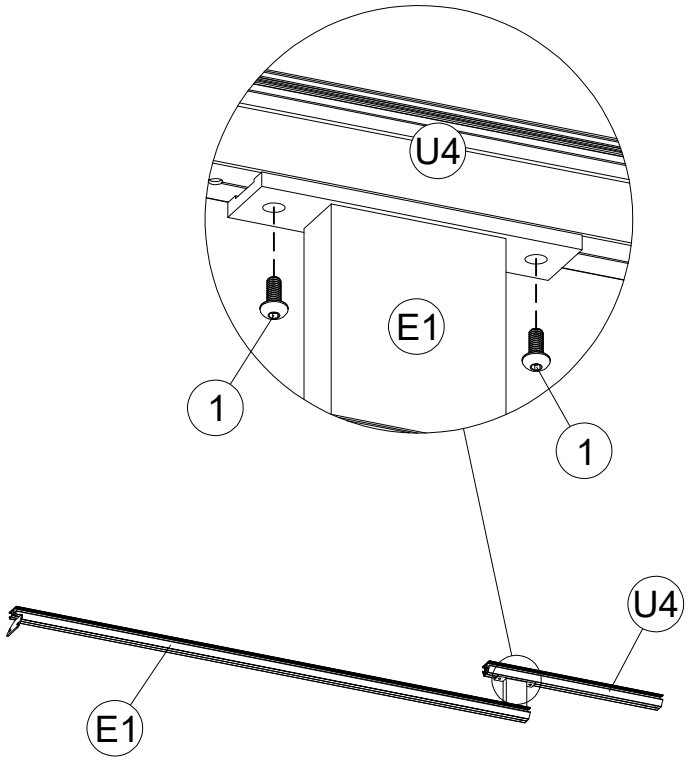





M6x15

1 x32

<17>

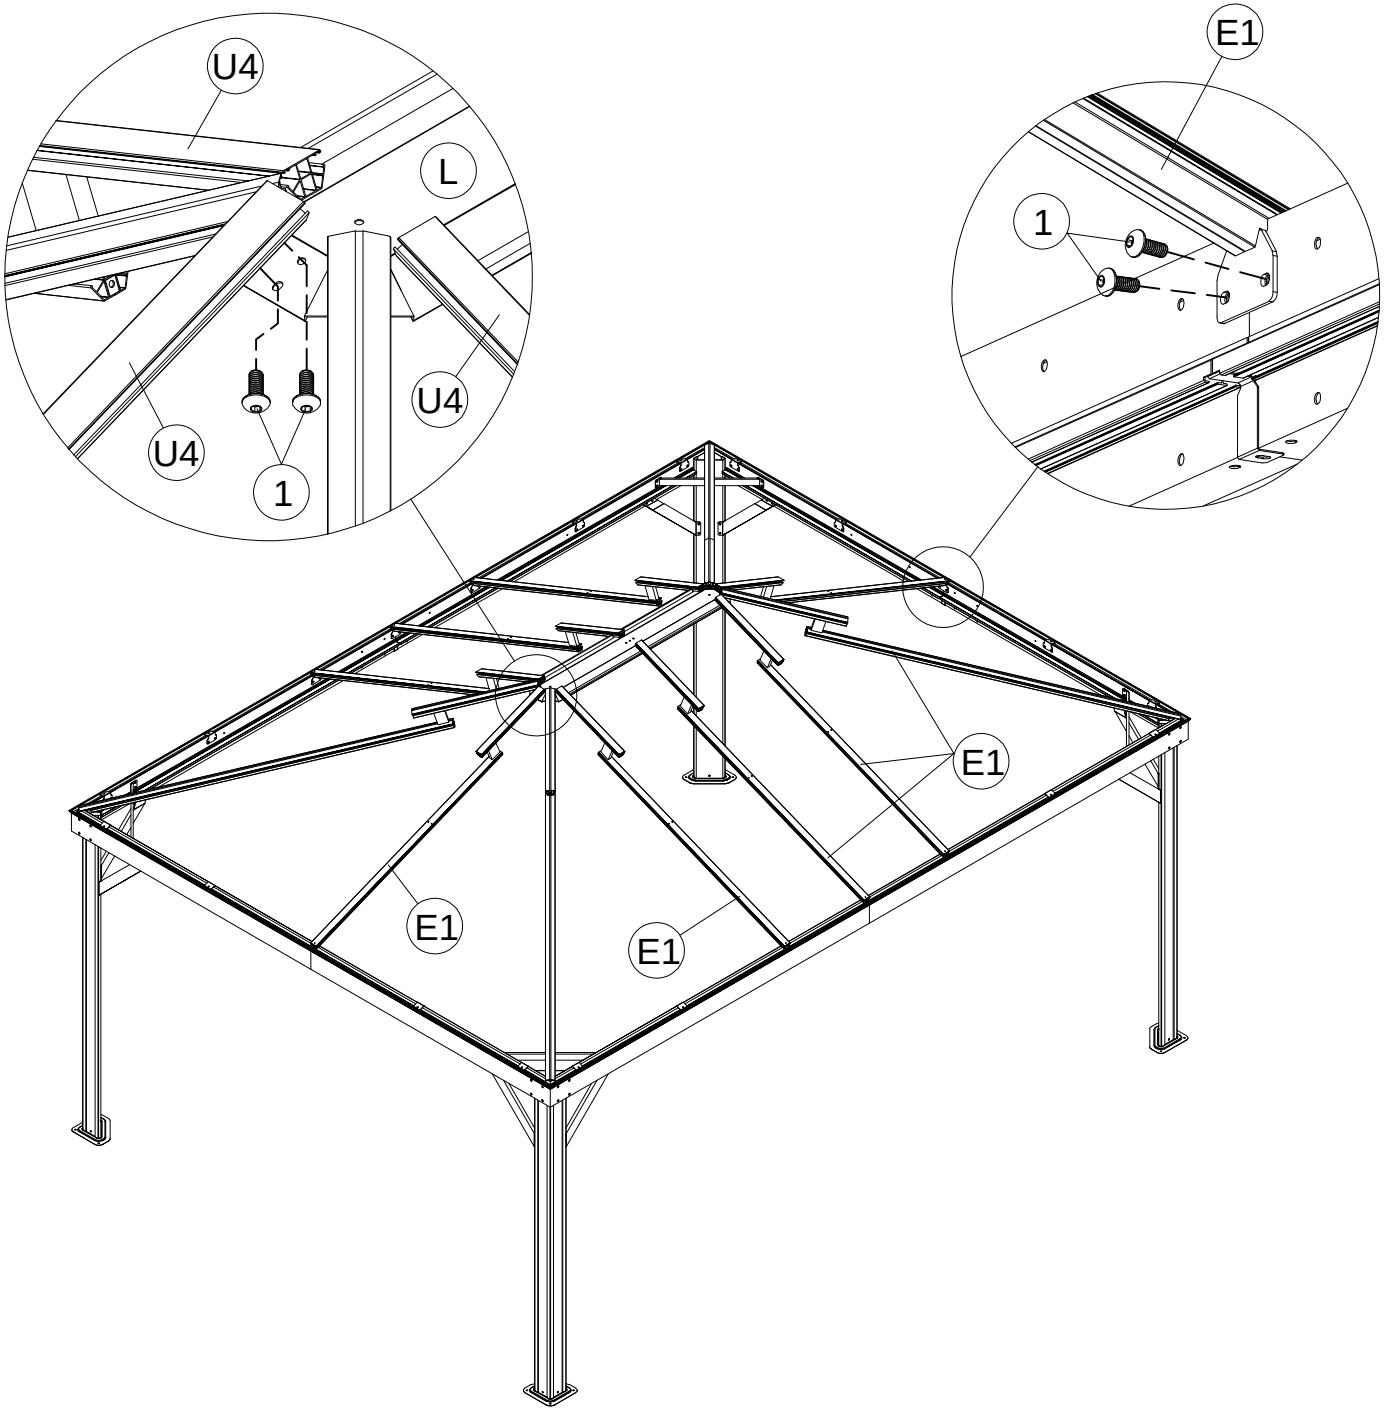



M x1



Za x2





M6x15


1 x3





5 x2

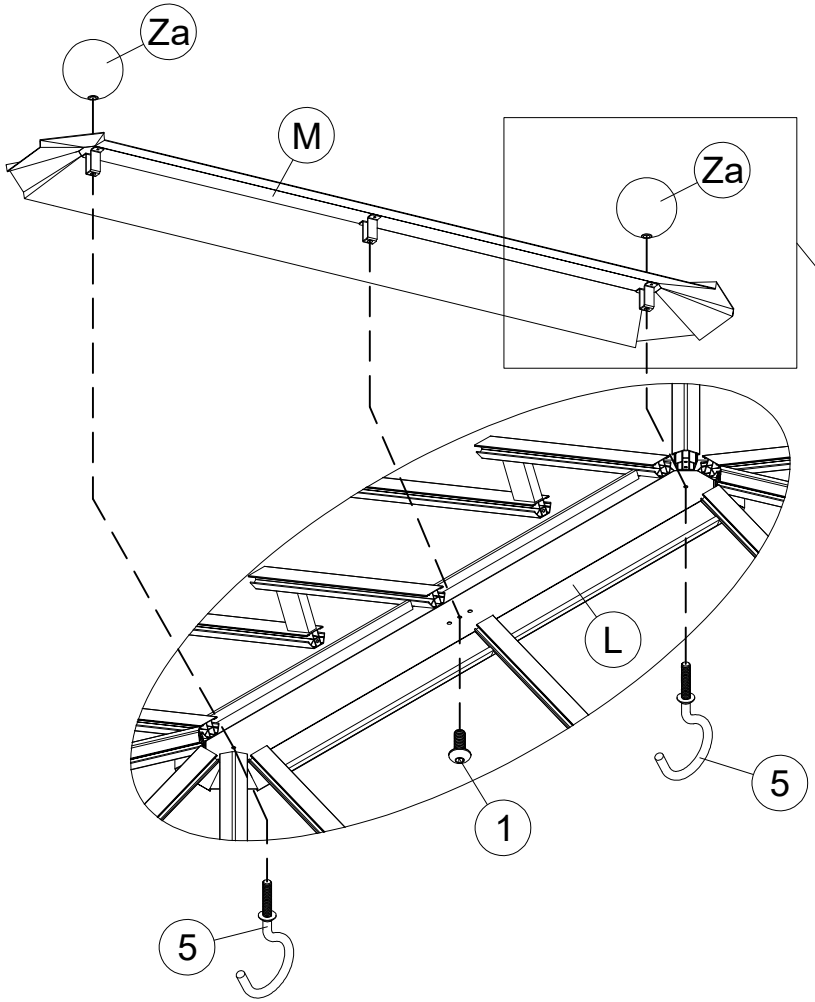


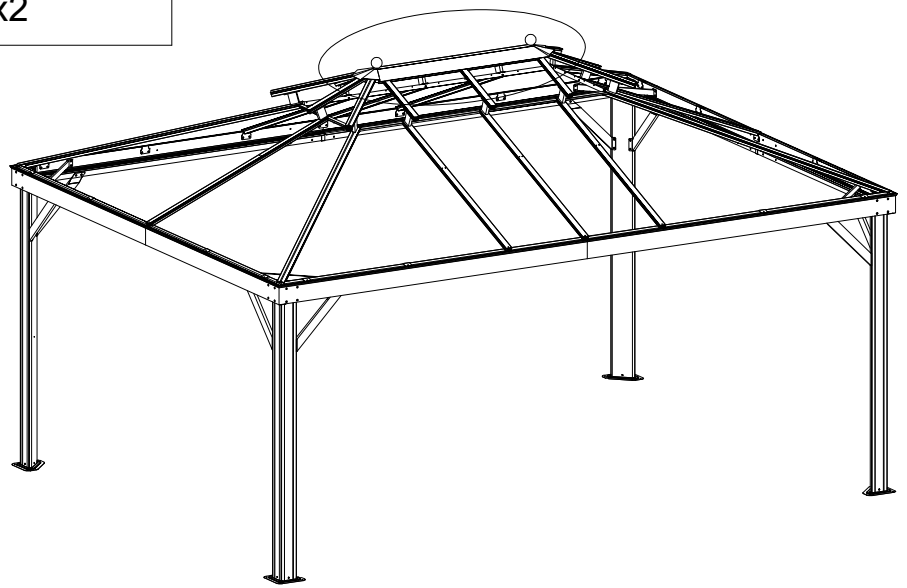


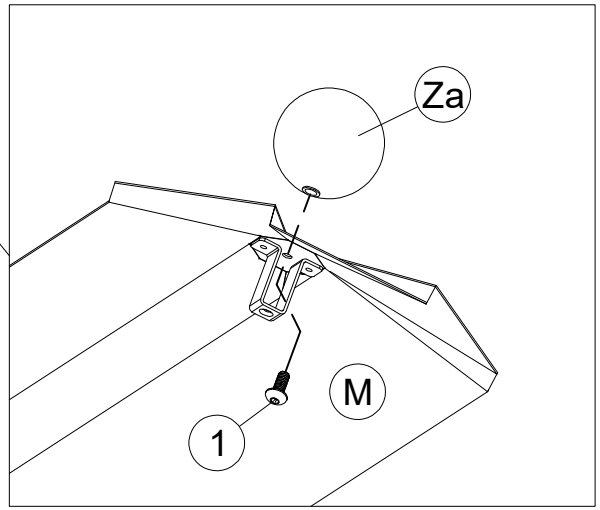



			 M6x15
G3 x2	G4 x2	N x4	1 x12

<19>

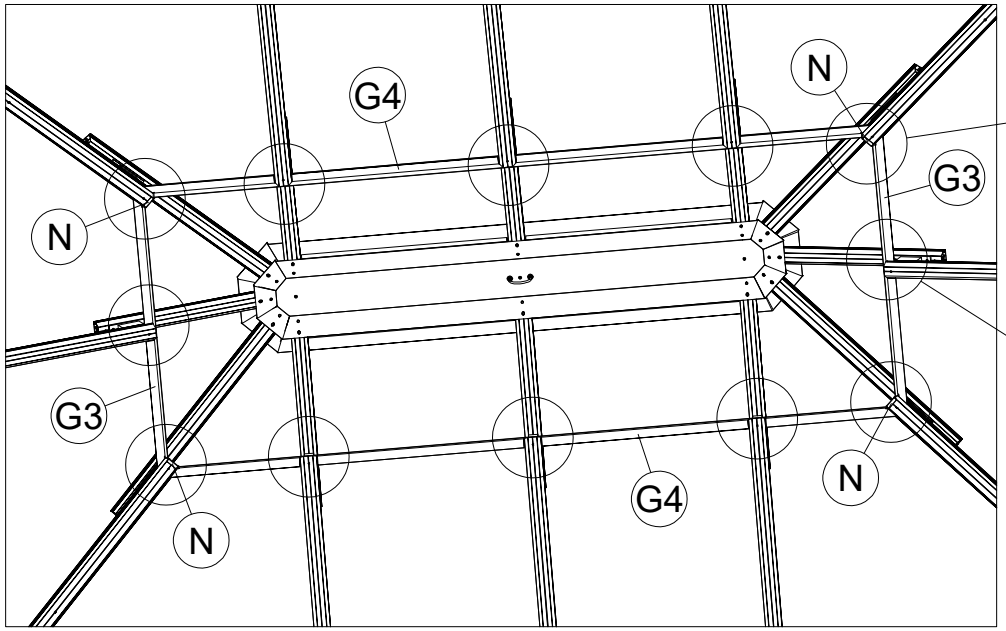


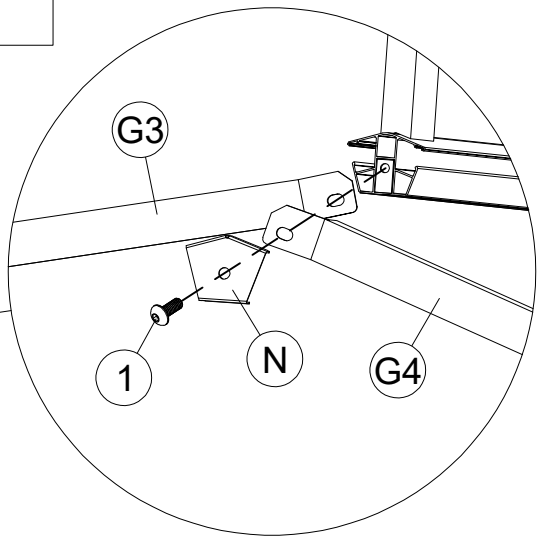

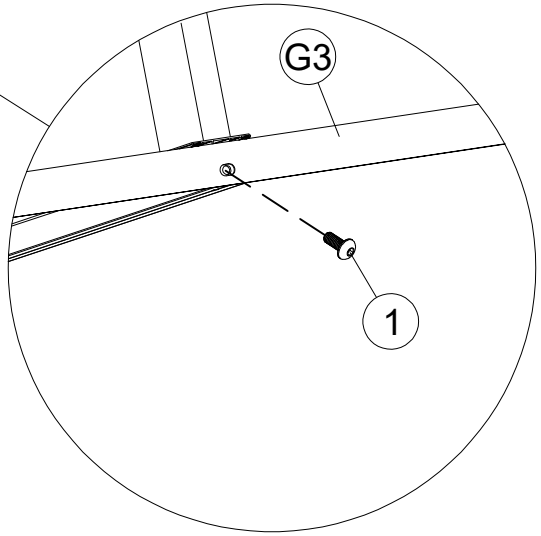

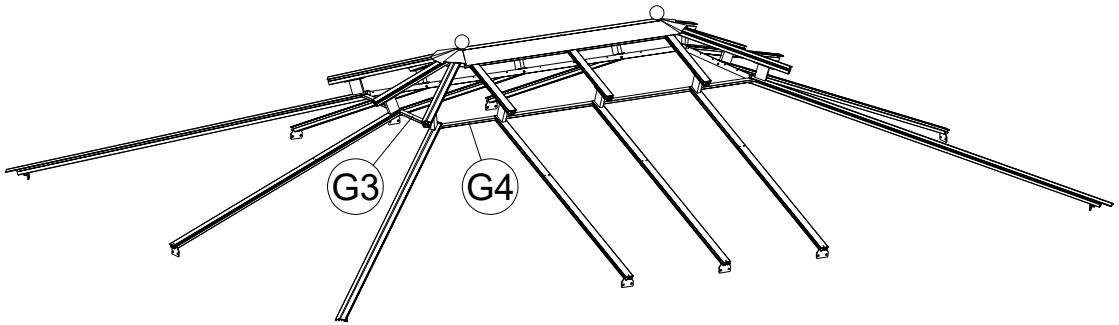


STEP 3

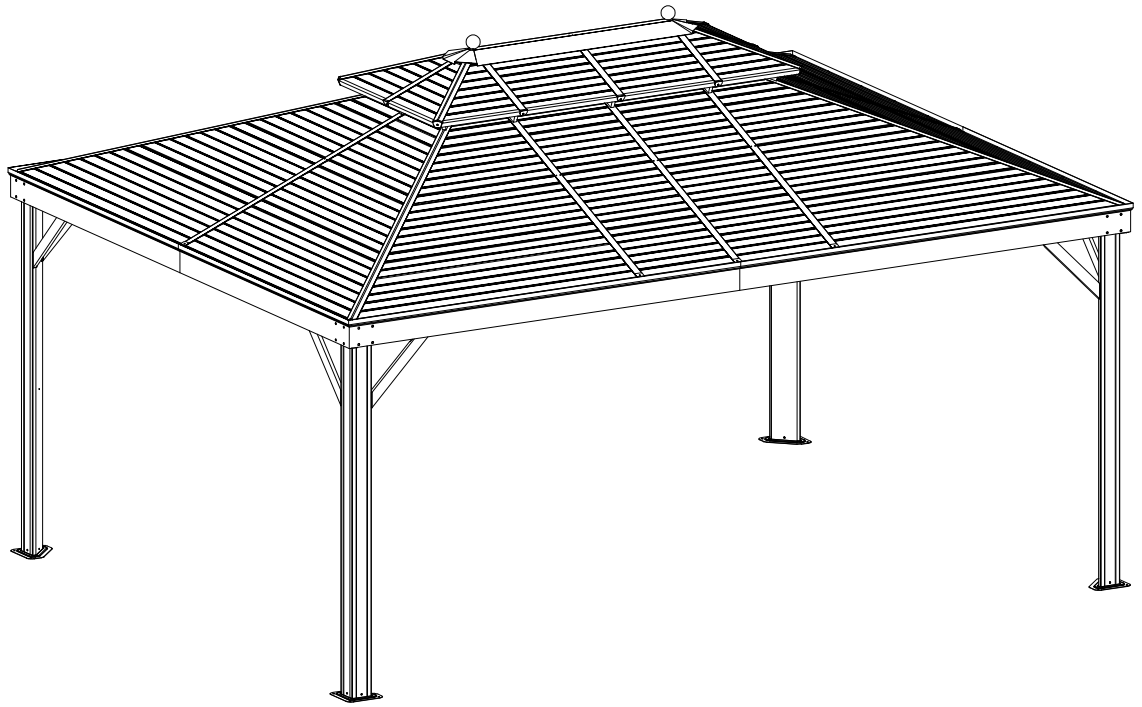


Tips: When installing the screws, don't tighten them all the way first, just roughly hold them in place, and when you're sure that all the parts are installed, then you can tighten the screws to secure the frame.

S x4	S1 x4	S2 x4

<20>

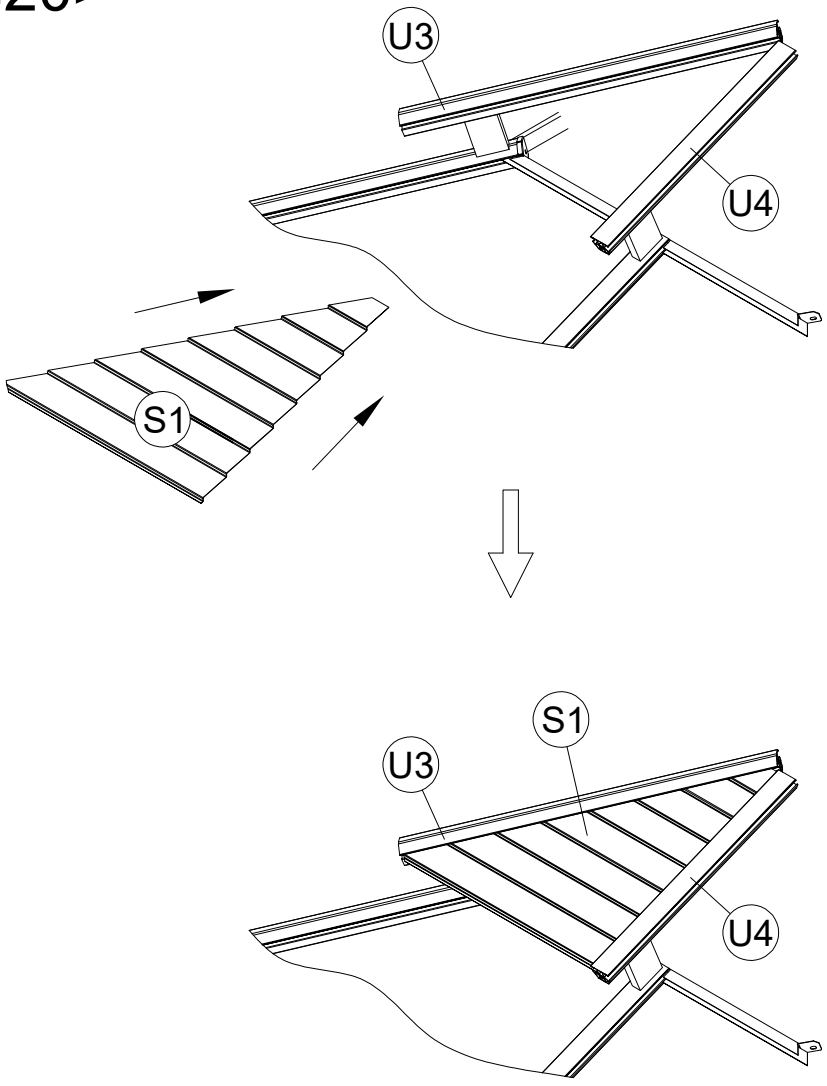


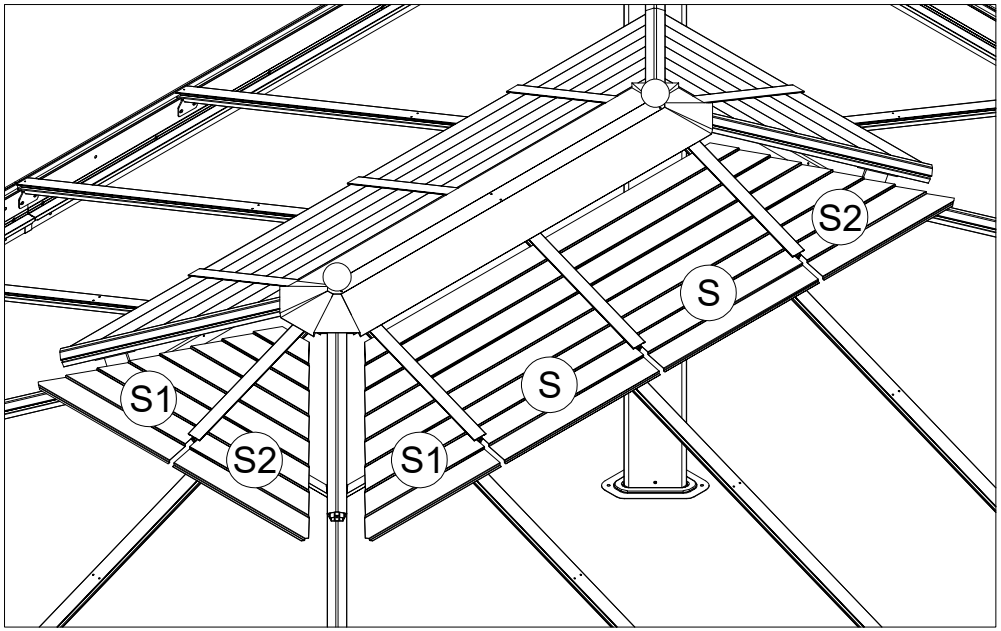



Tips:
1. Before installing the panels, first tear off the protective film.
2. When installing the panels, gently slide them into the track.
3. If you meet resistance during the sliding process, pull back the panels and try to install them again, don't exert too much force to avoid the panels breaking.
4. If the panels can't be stuck into the sliding groove, you can Use sharp-nosed pliers to open the slots a little.


G x2	G1 x4	G2 x4	N x4	N1 x8	1 x12 M6x15

<21>

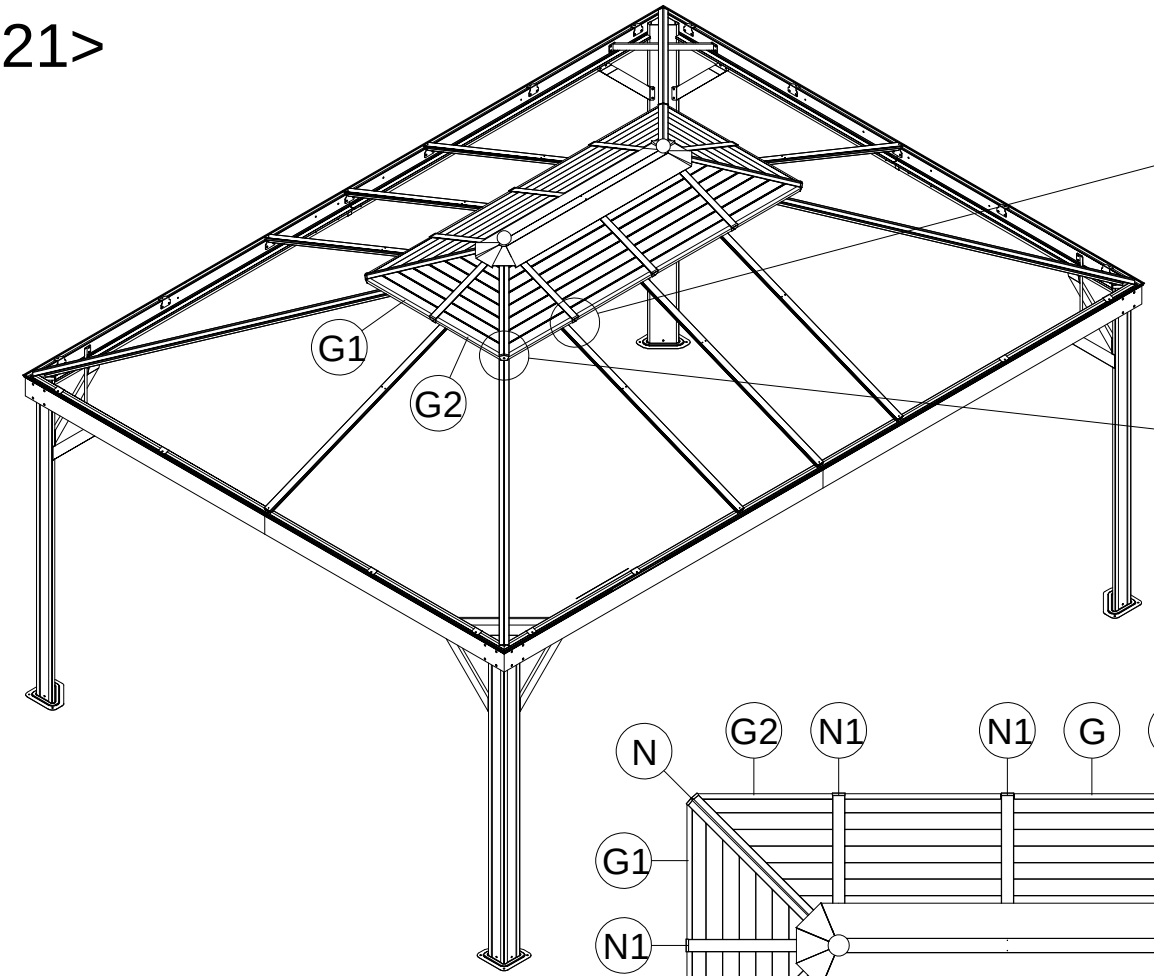


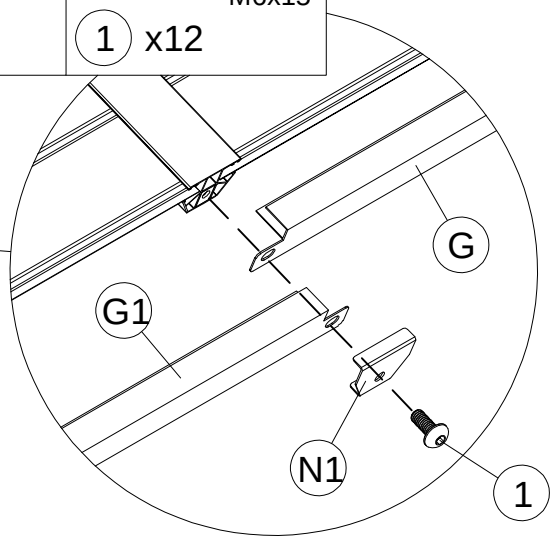

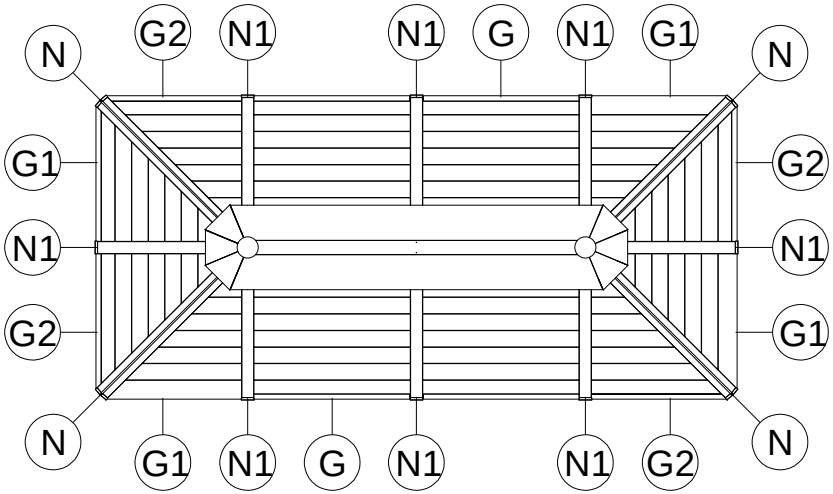

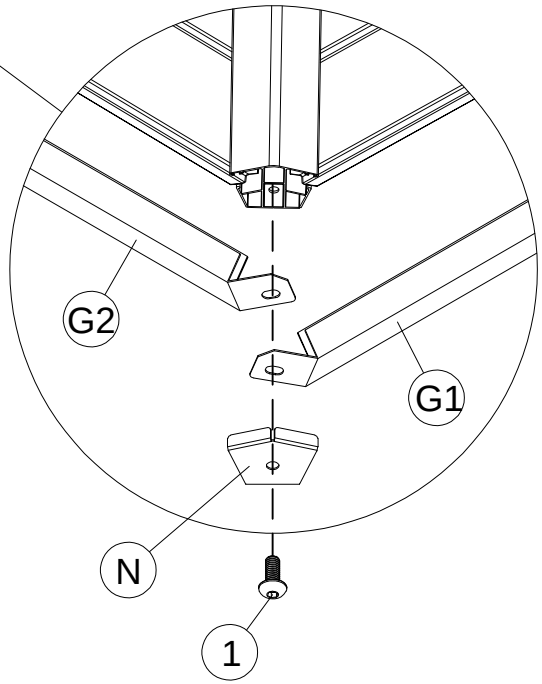

Tip: When installing the brackets, there will be overlap between the brackets. Do not tighten the screws yet, wait to make sure all the brackets are in the correct position before tightening the screws to secure them.



F x8




N4 x8




M6x15

1 x8

<22>

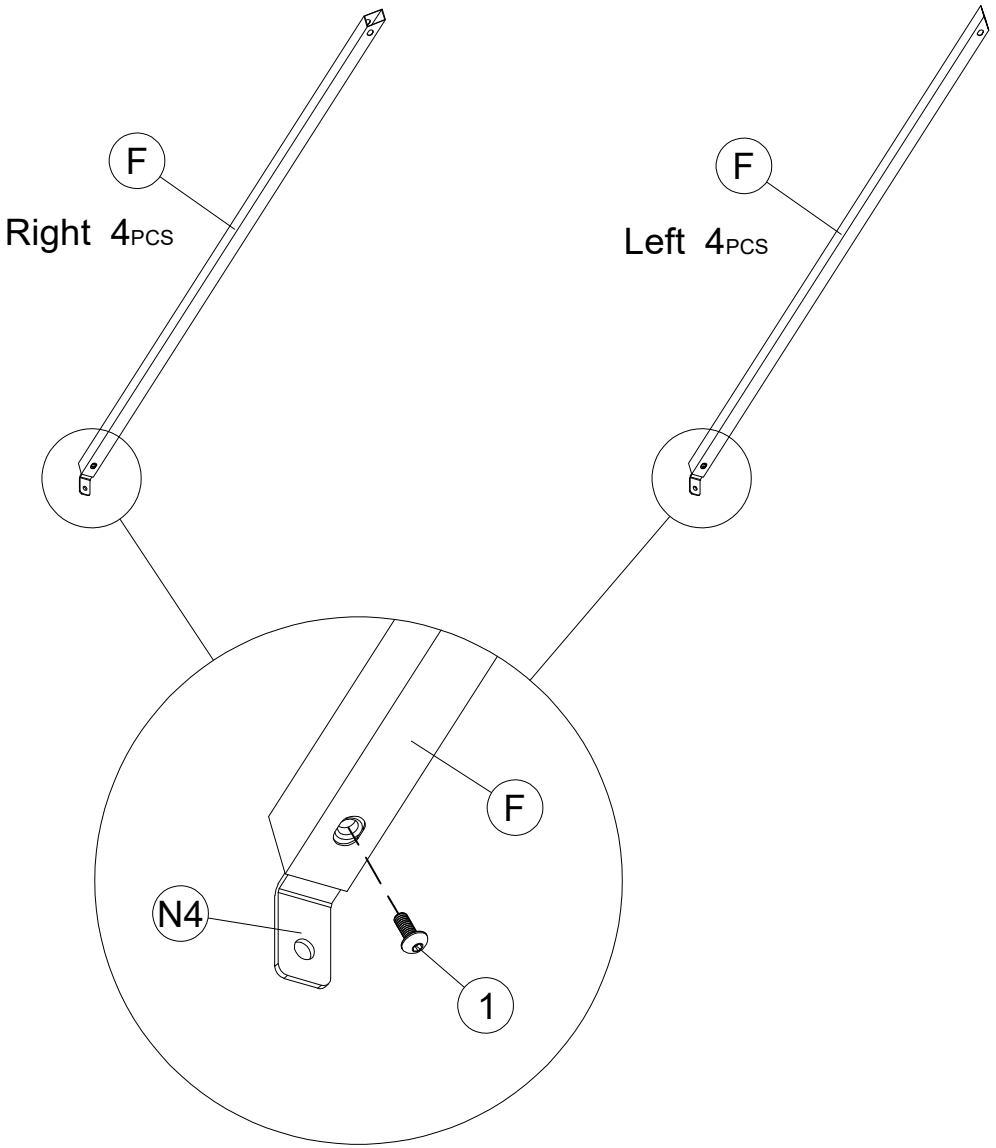




N3 x4




M6x15

1 x4

<23>

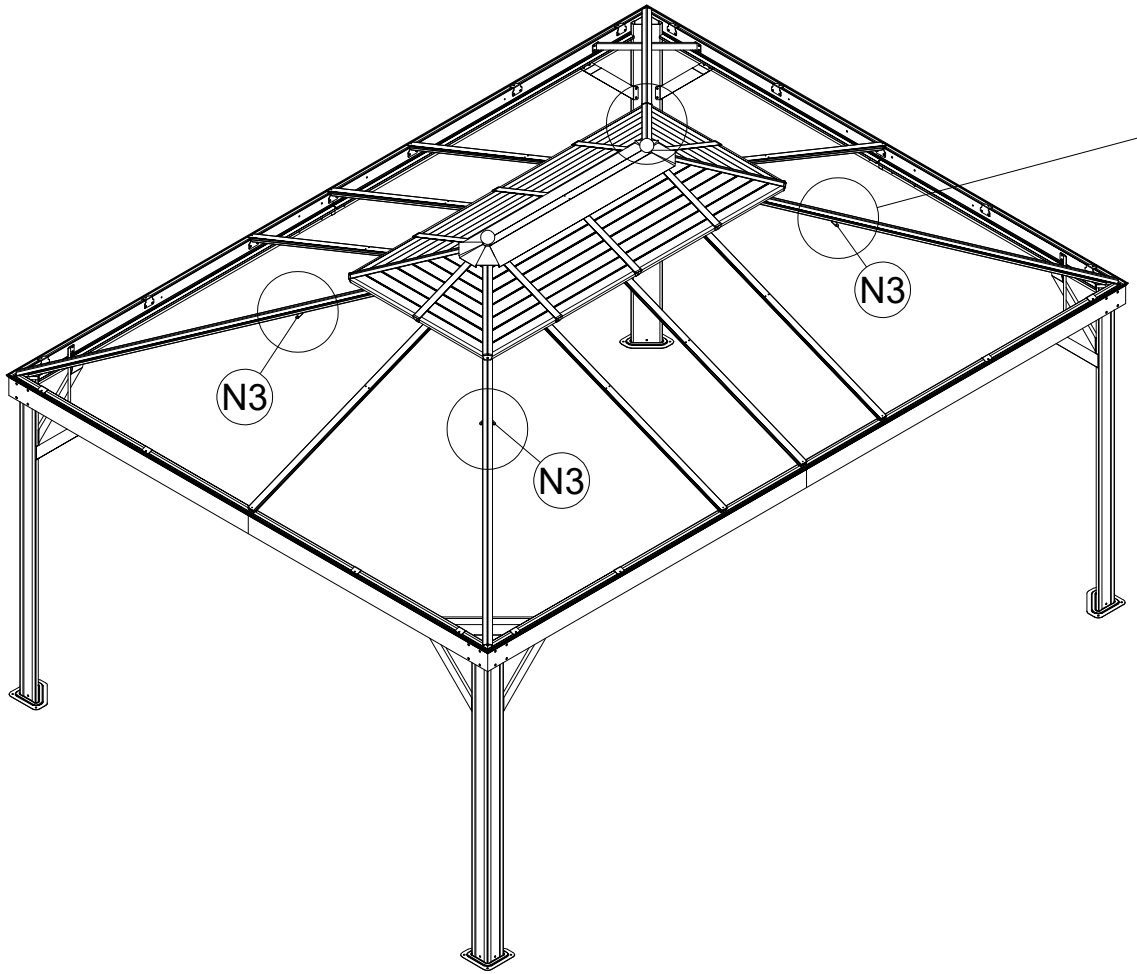

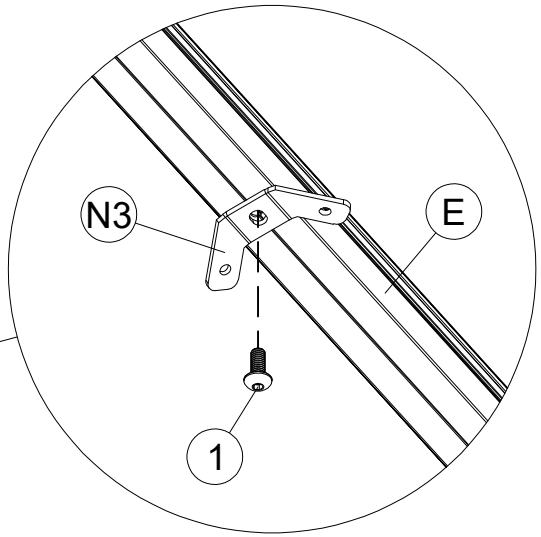










M6x15

1 x16

<24>

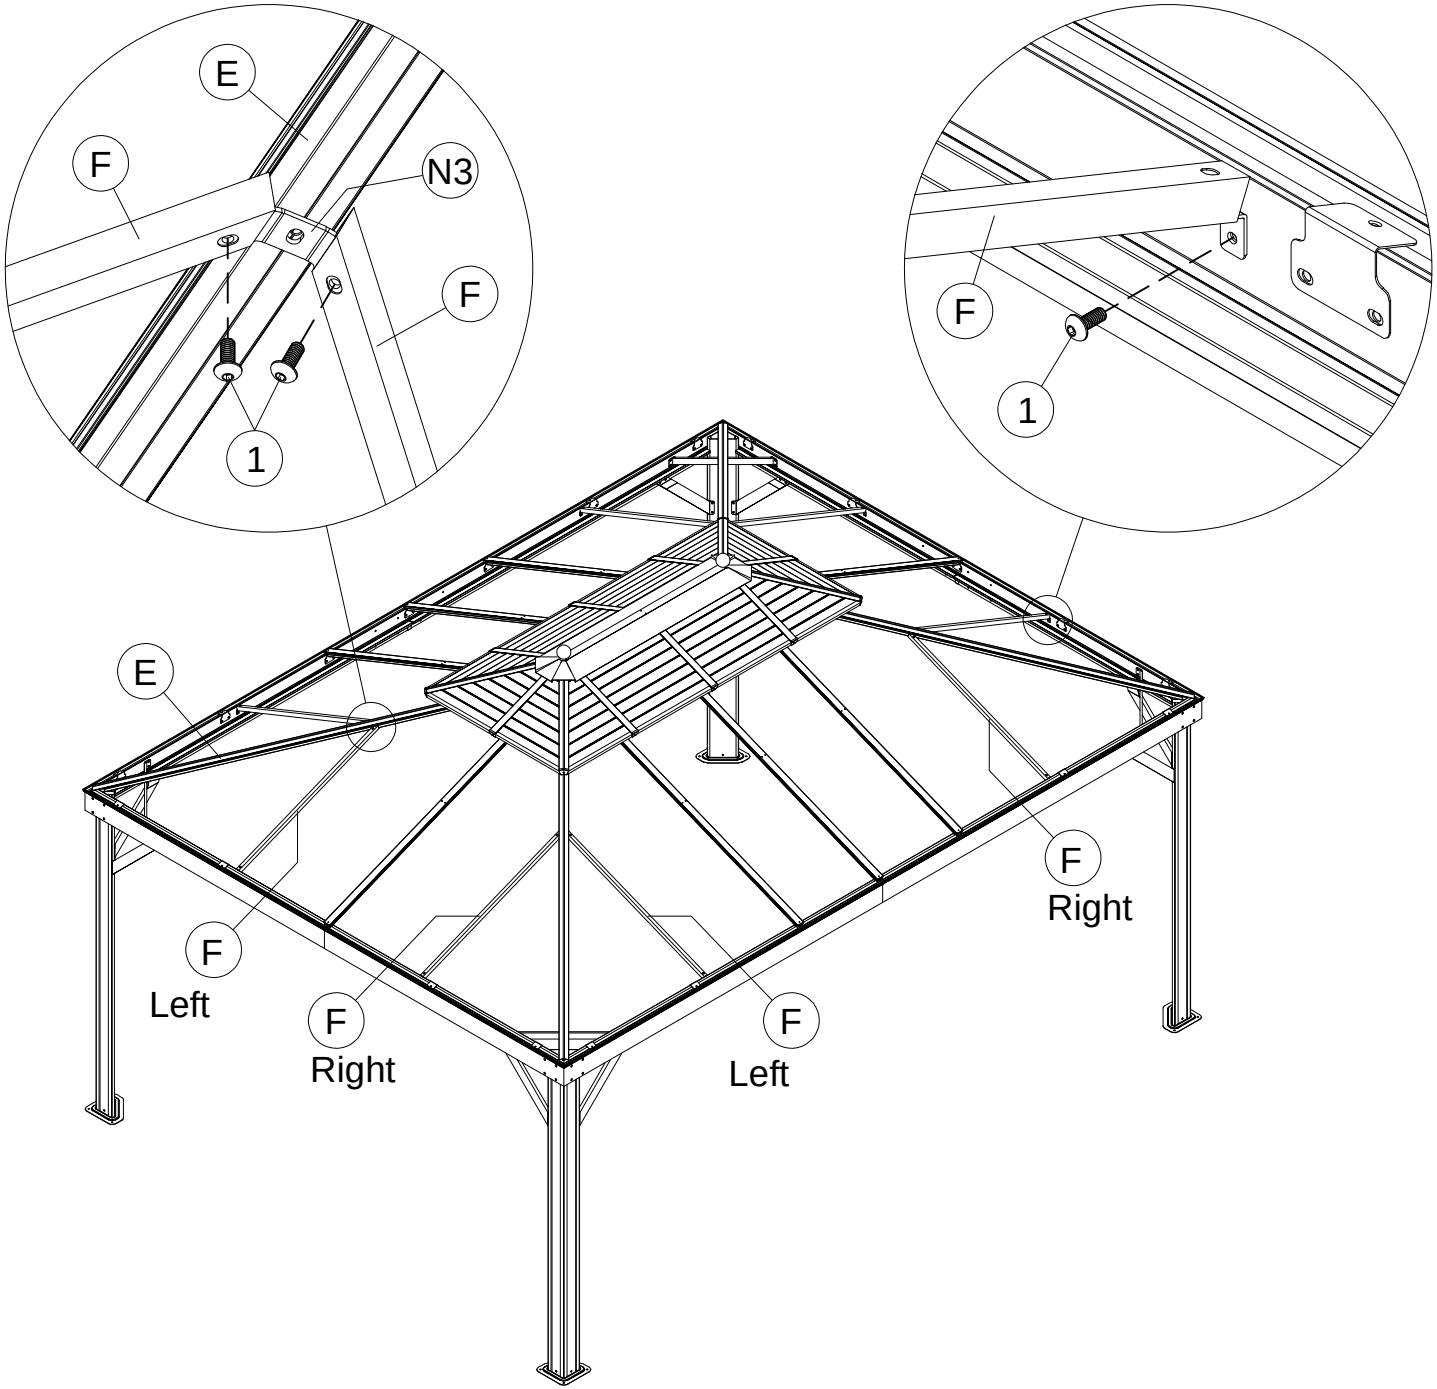



 Q x12	 Q1 x4	 Q2 x4	 R x4	 N2 x8	 W x16	 Y x24



ST4.8x12
4 x8



M5x6
6 x16

<25>

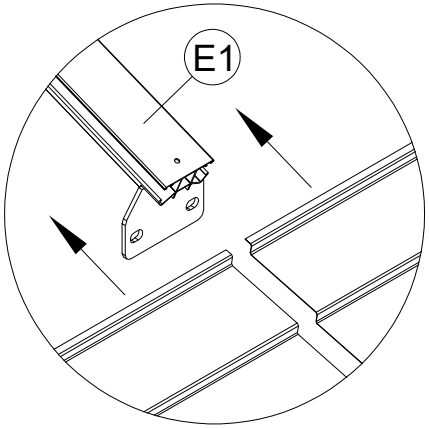


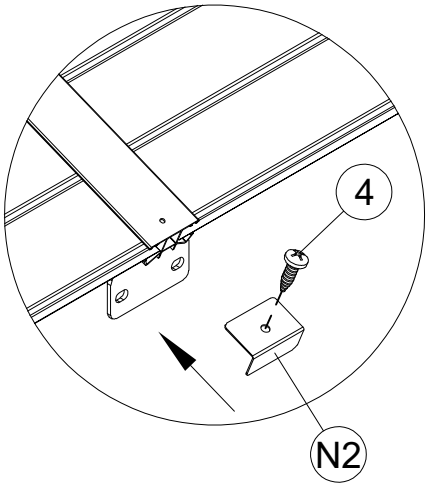


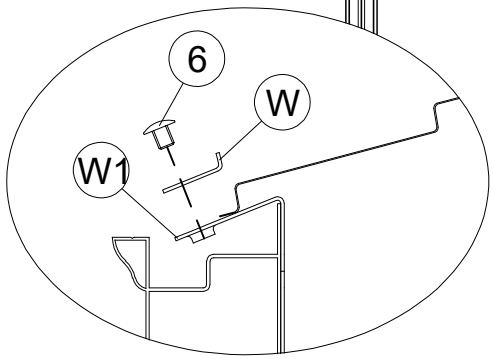

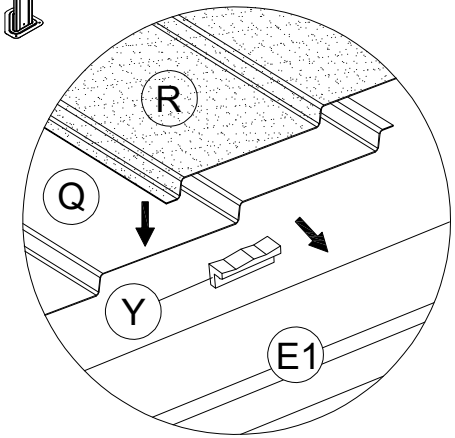


Note:
Y is stuck in the position where the small piece R and the large piece Q overlap.

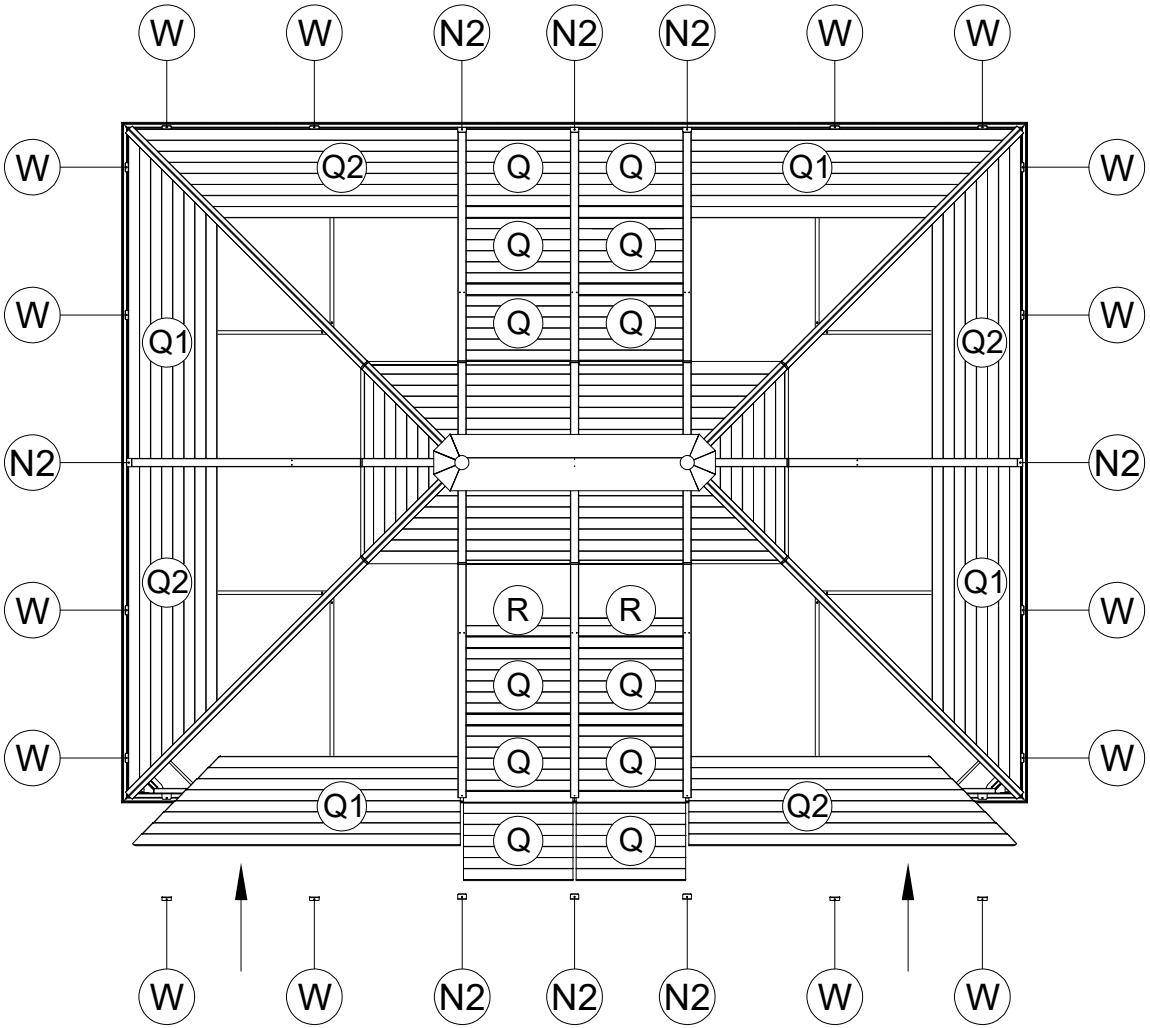
W
W
N2
N2
N2
W
W
W
Q2
Q
Q
Q1
W
Q
Q
W
Q1
Q
Q
Q2
W
N2
N2
Q2
Q1
R
R
W
Q
Q
W
Q
Q
W
Q1
Q2
Q
Q
W
W
N2
N2
N2
W
W



Q3 x4




Q4 x4






Y x16

<27>

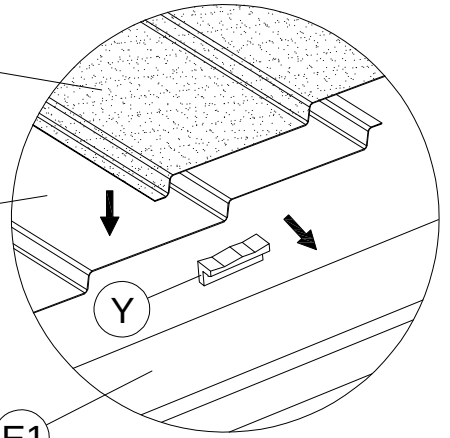



Note:
Y is stuck in the position where the small piece (Q3,Q4) and the large piece (Q1,Q2) overlap.

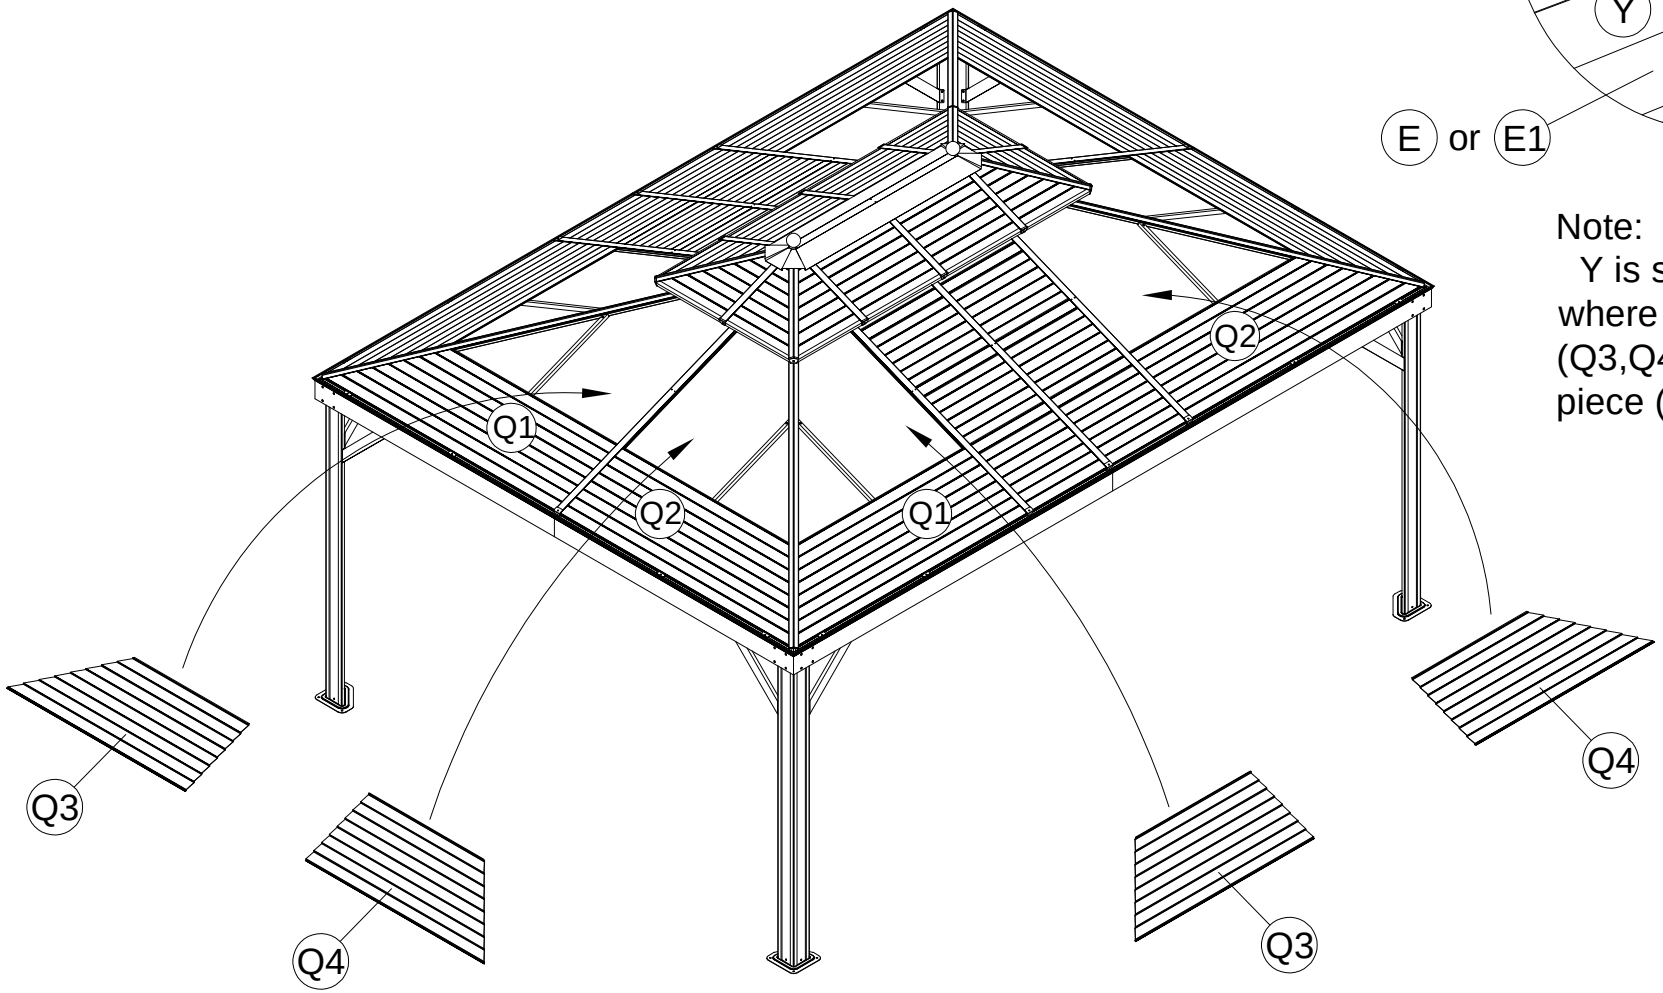

		
Q5 x4	Q6 x4	Y x16

<28>

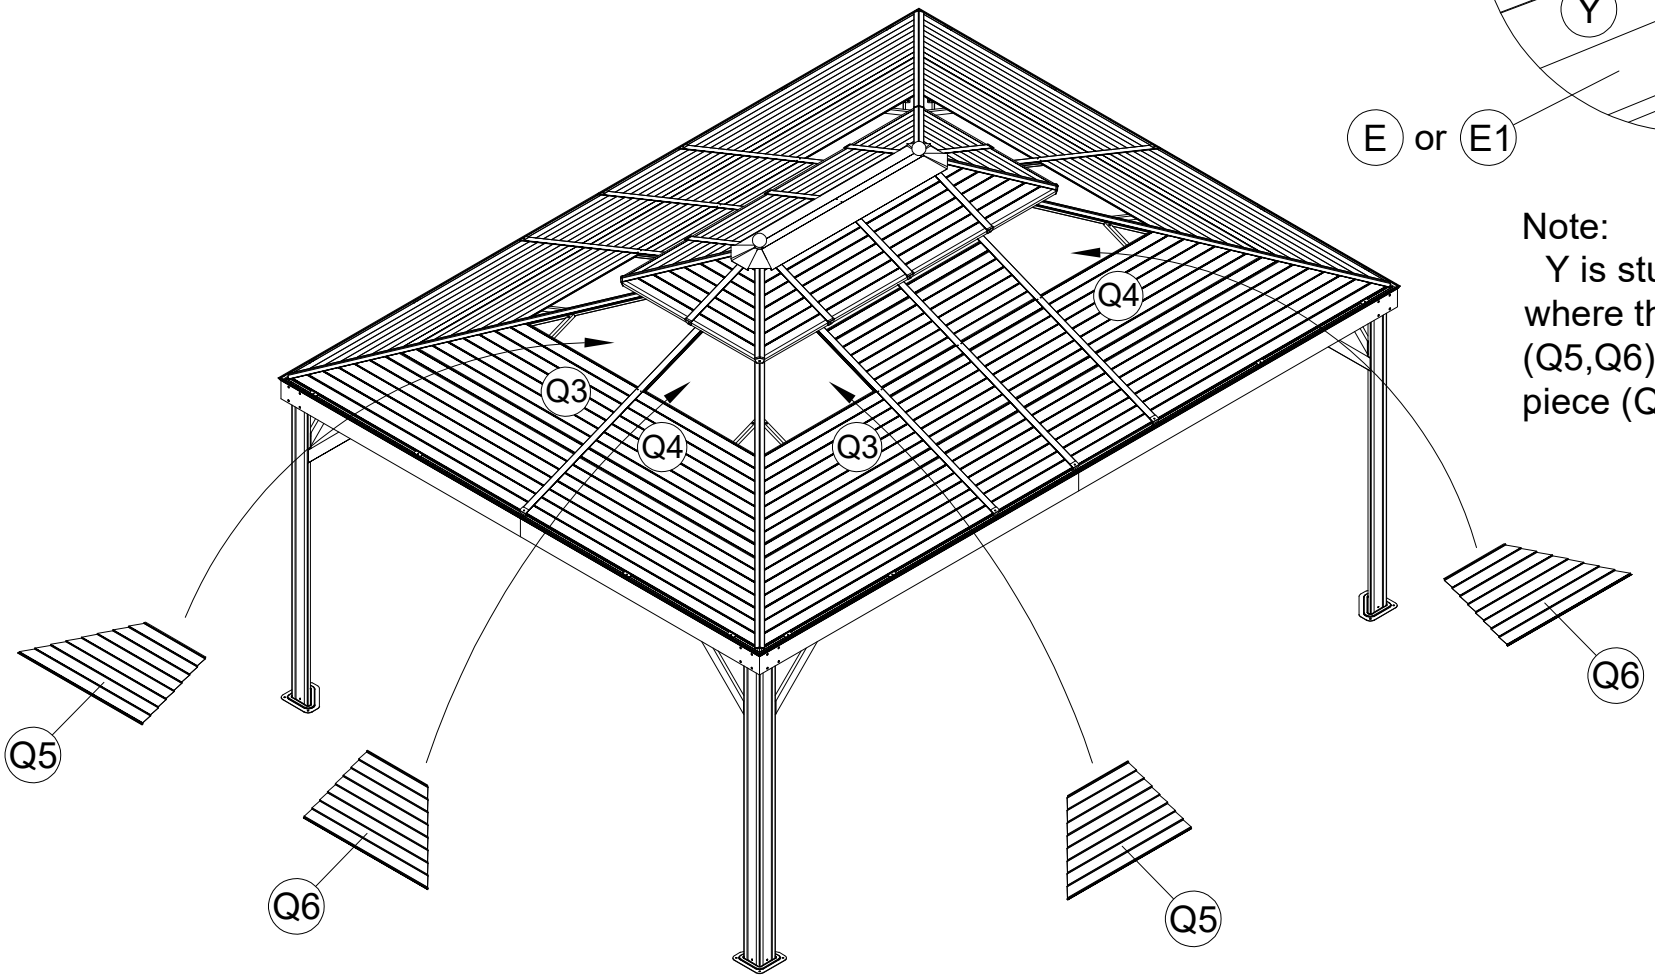


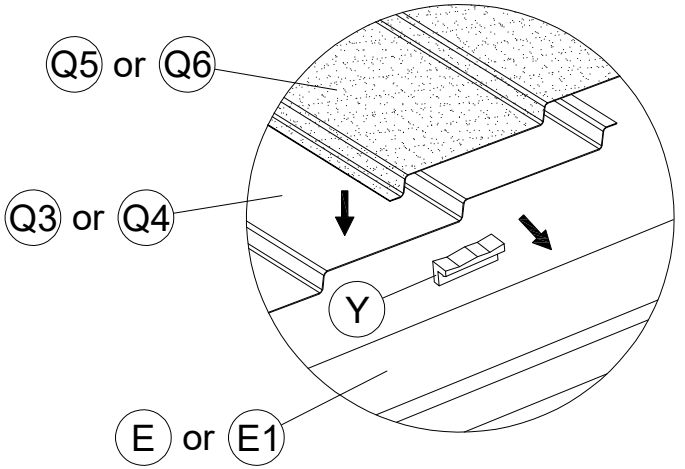


Note:
Y is stuck in the position where the small piece (Q5,Q6) and the large piece (Q3,Q4) overlap.


		
R1 x4	R2 x4	Y x16

<29>

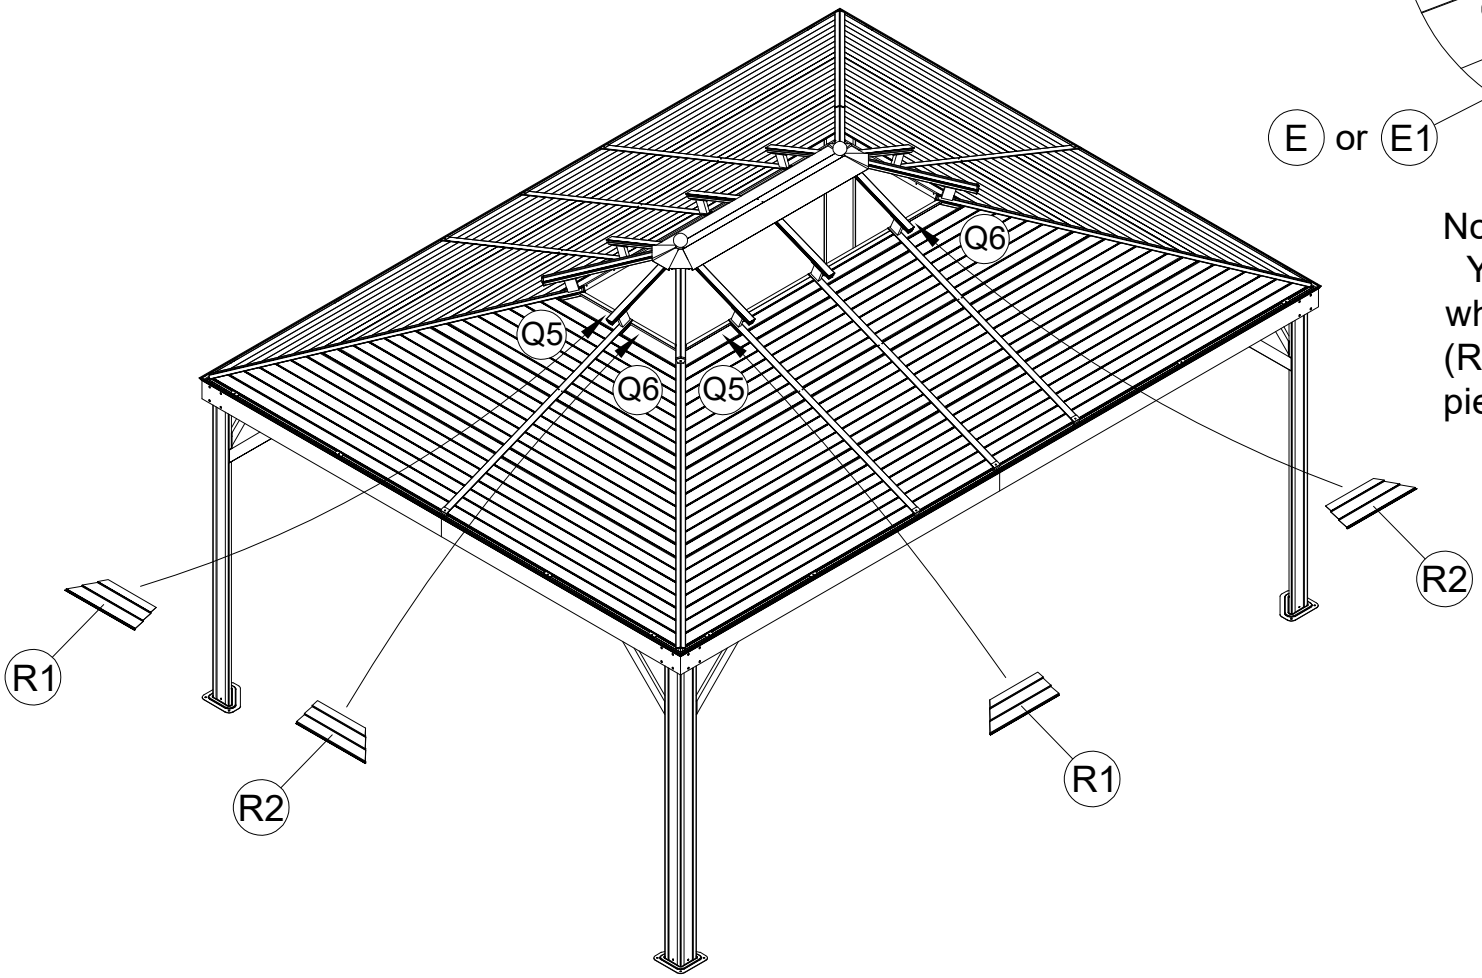

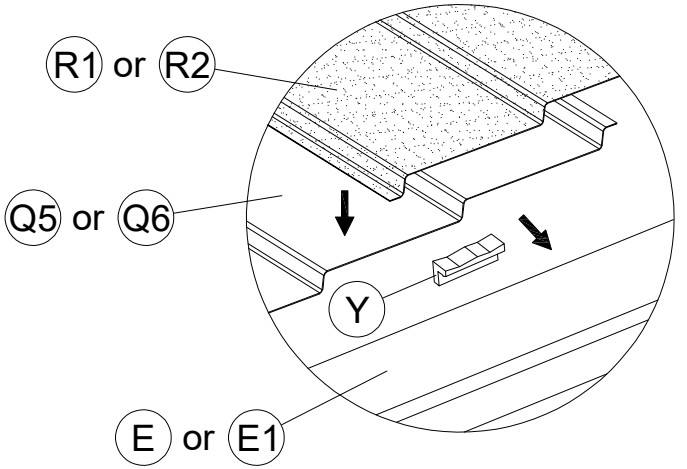

Note:
Y is stuck in the position where the small piece (R1,R2) and the large piece (Q5,Q6) overlap.




Y1 x16




ST4x8

7 x16

<30>

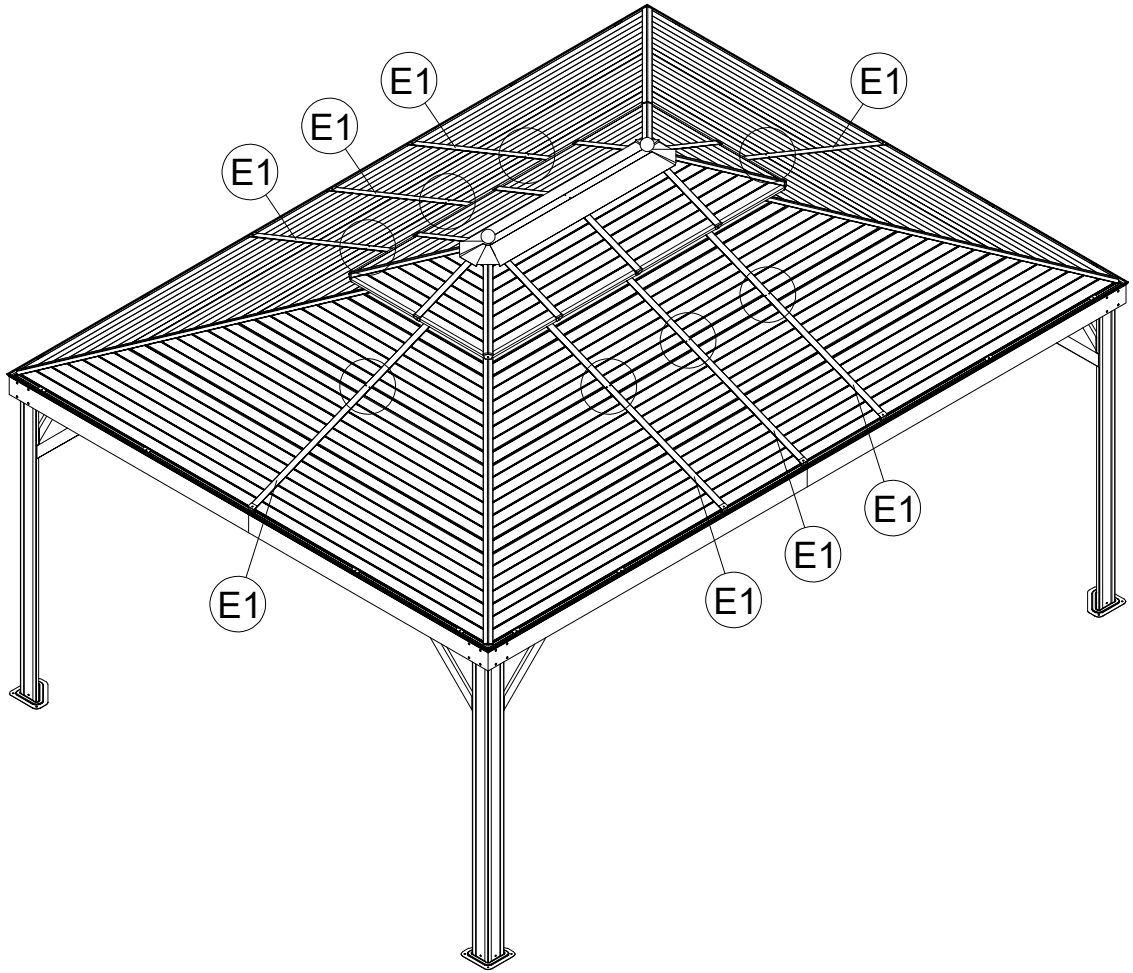



Note: pls use power tools to drill the screws.

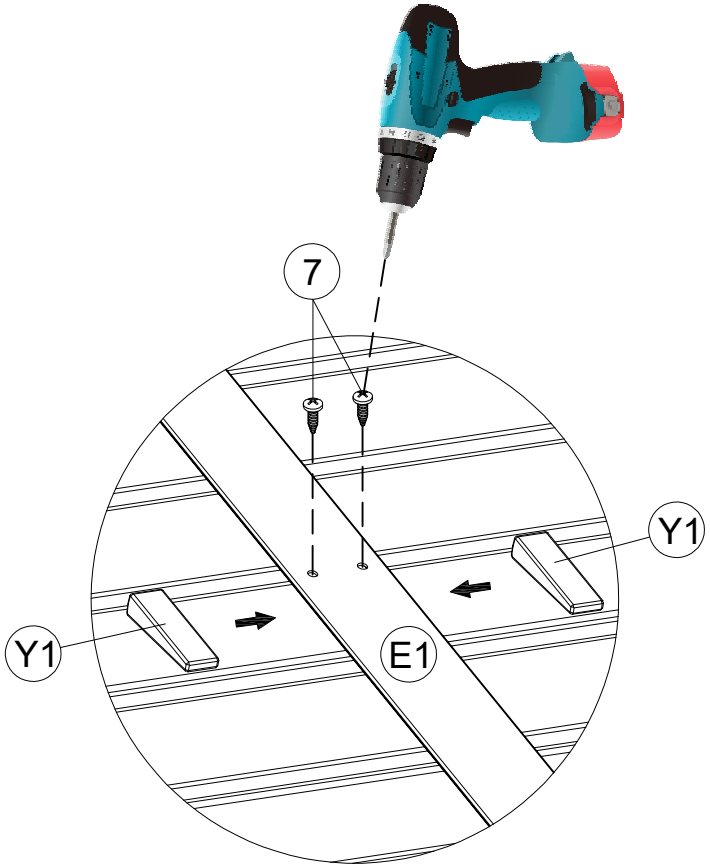

				 ST4x8
D x2	D1 x2	D2 x2	D3 x2	7 x52

<31>

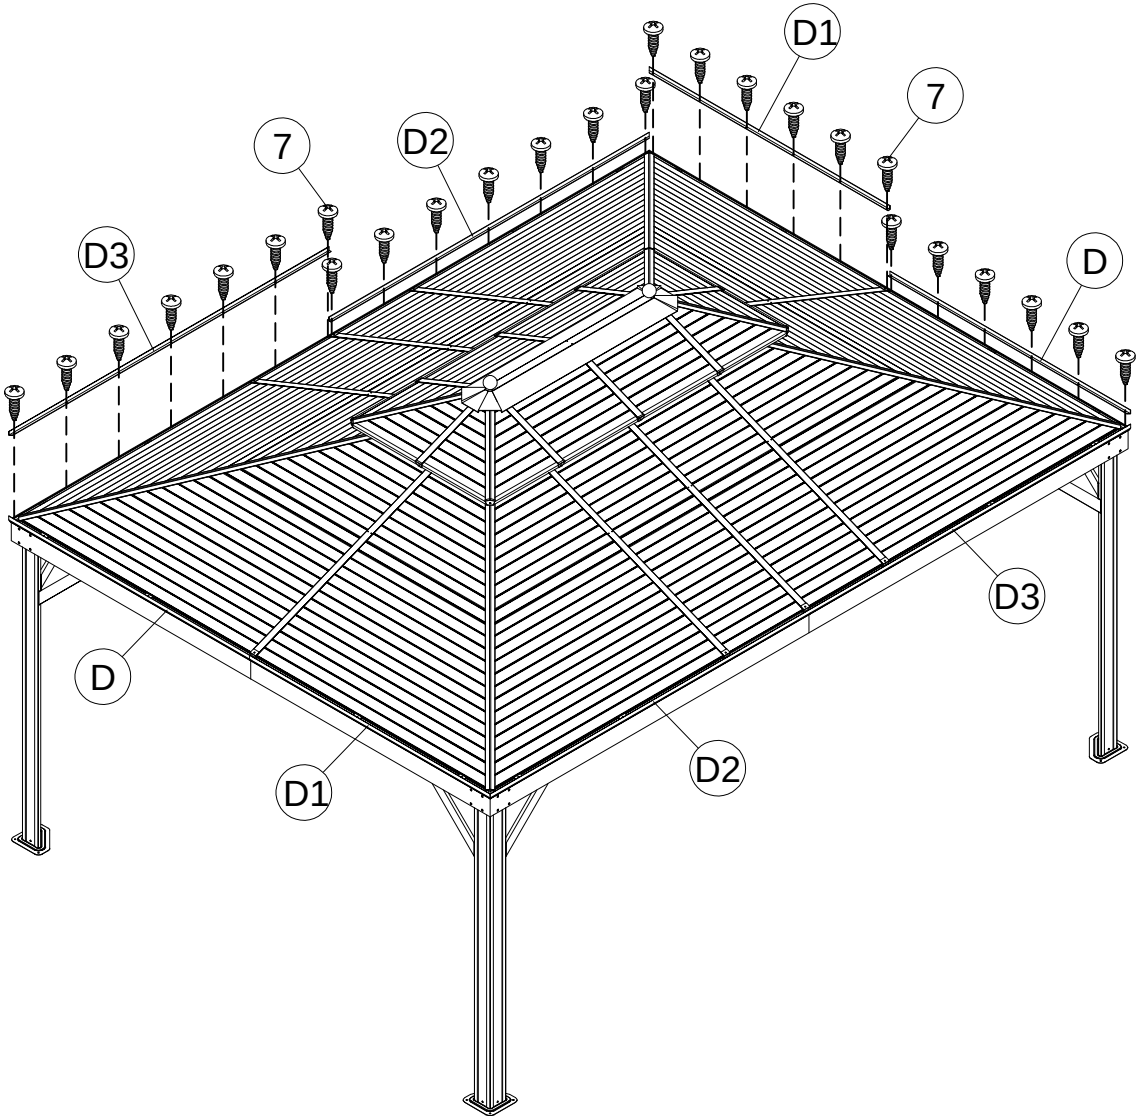

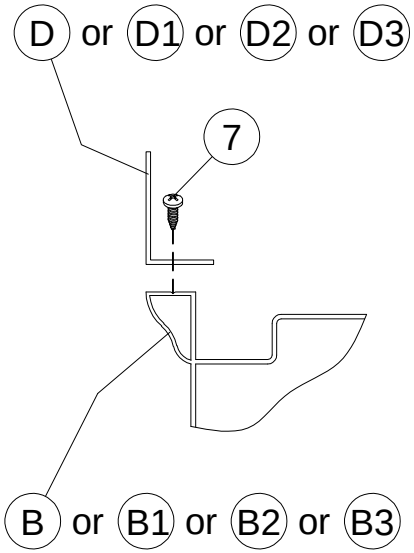




K x4





ST4.8x12

4 x8


<32>

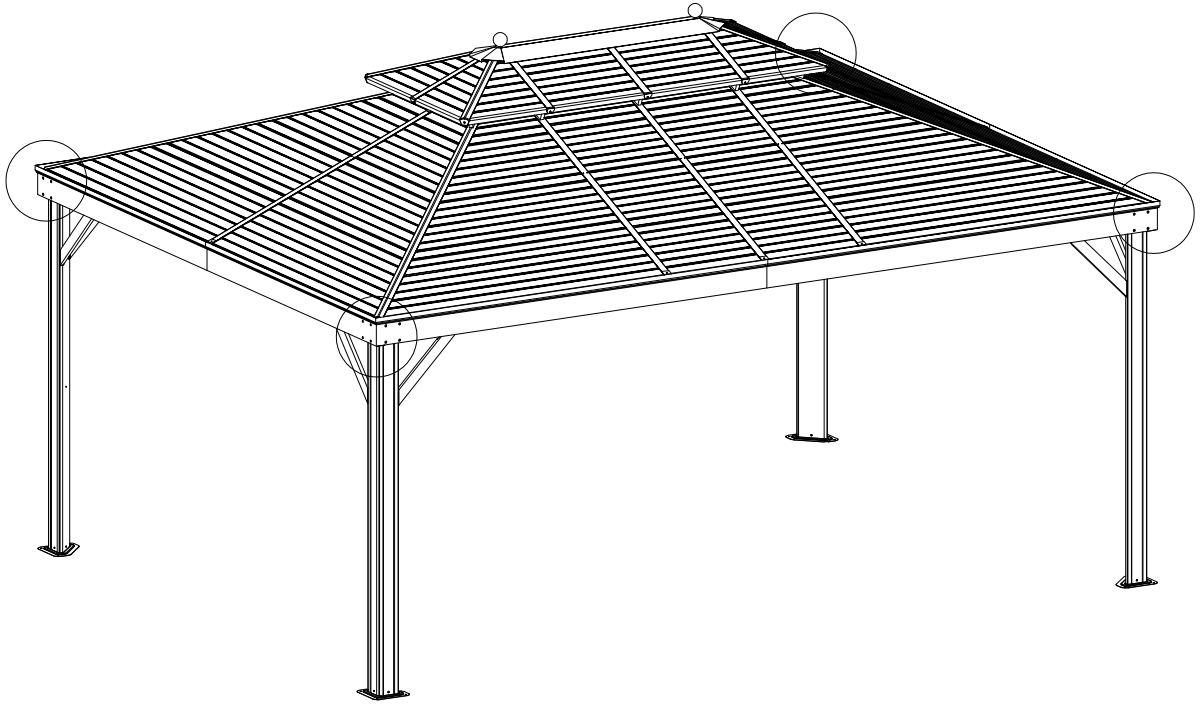

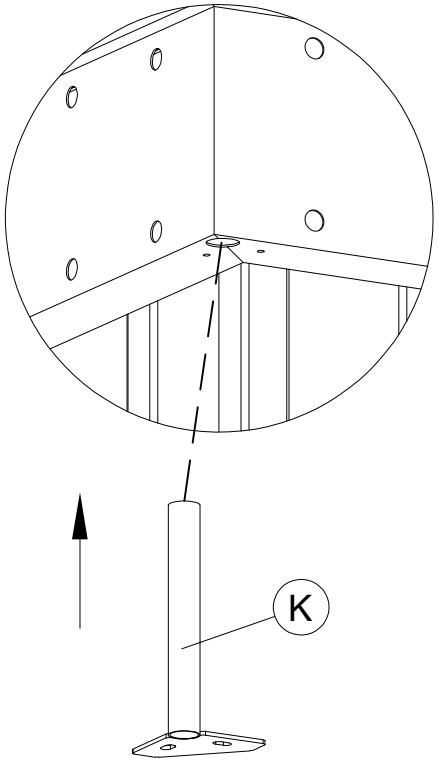


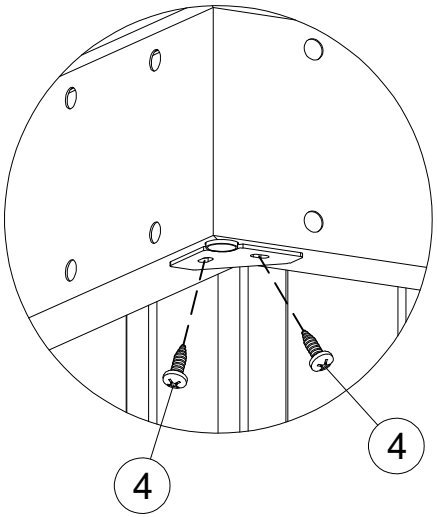


STEP 4

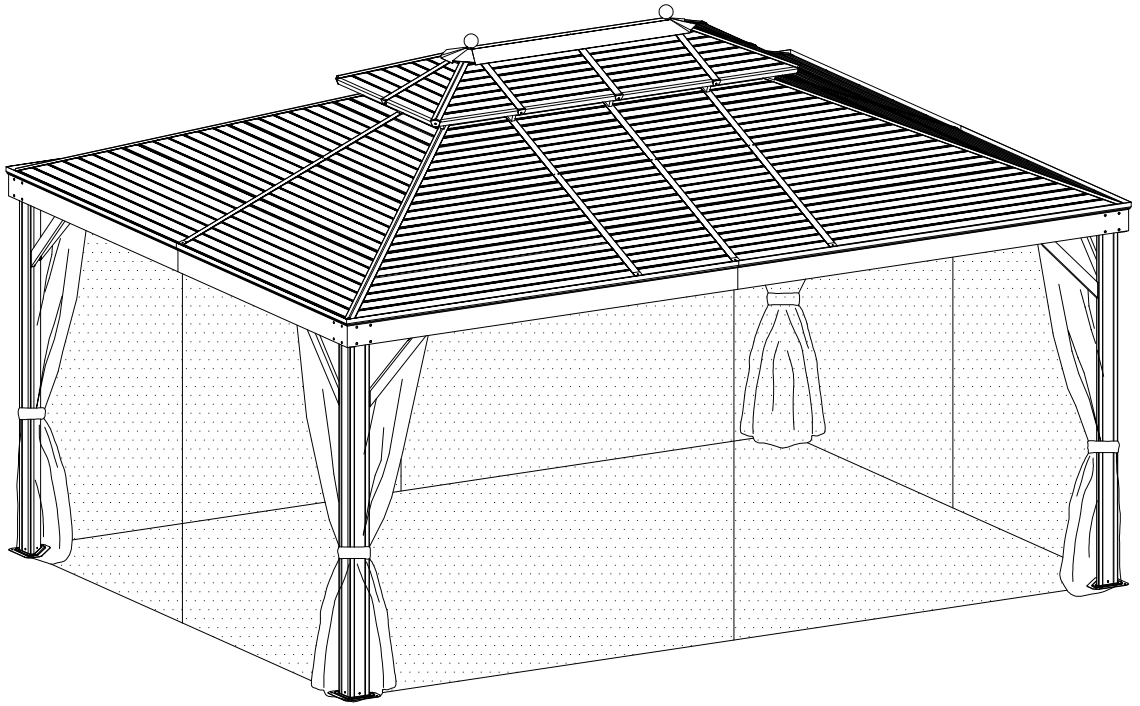


Tip: Be sure to hang the nettings on the inside track and the privacy curtains on the outside track

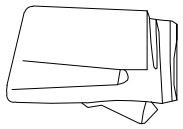


T x4




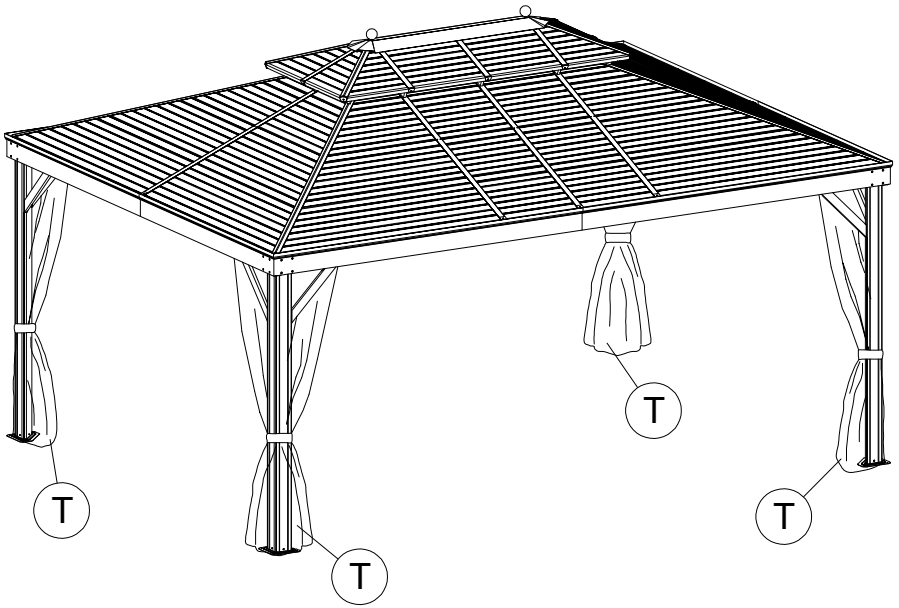


<33>

Tips: When installing curtains, you can first find the tie for the curtain, and then hang the curtain according to the hole number on the left and right sides of the tie.

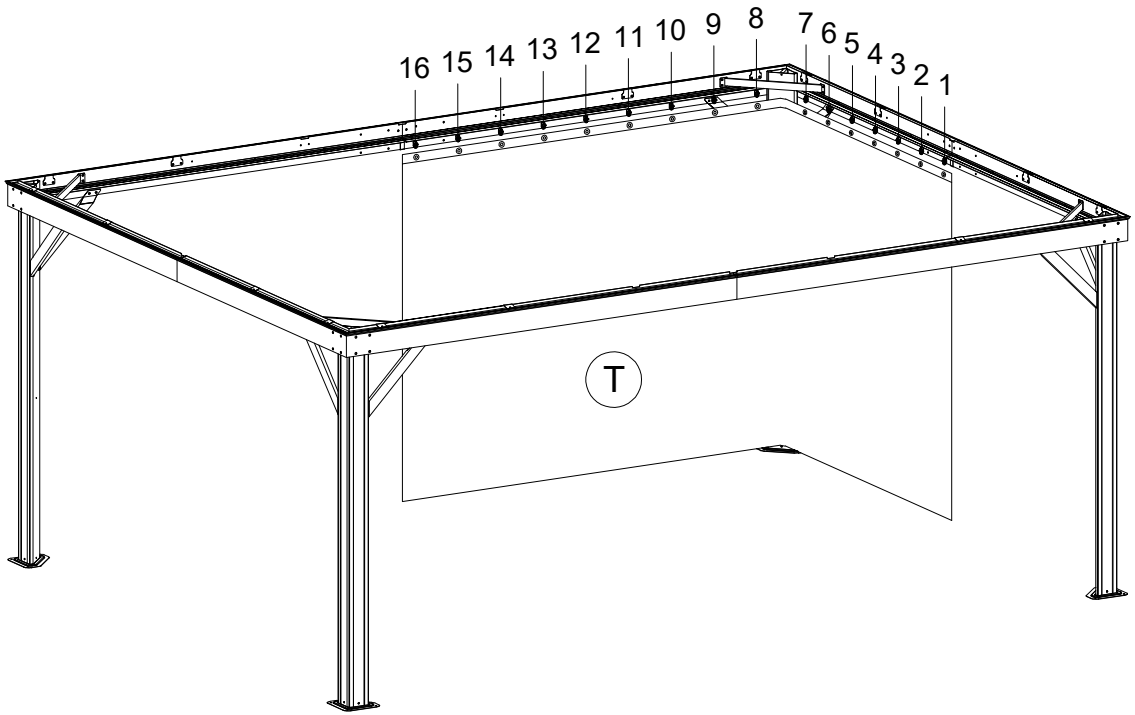


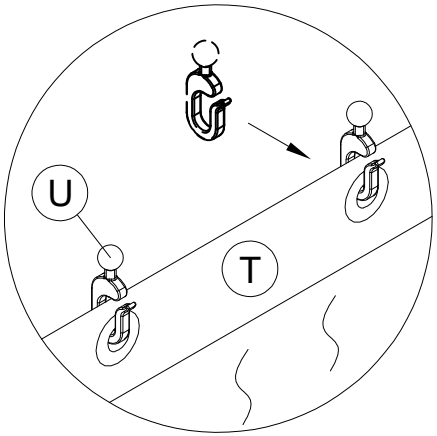


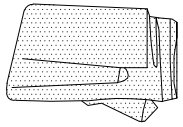


T1 x4


<34>

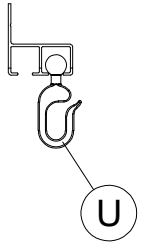


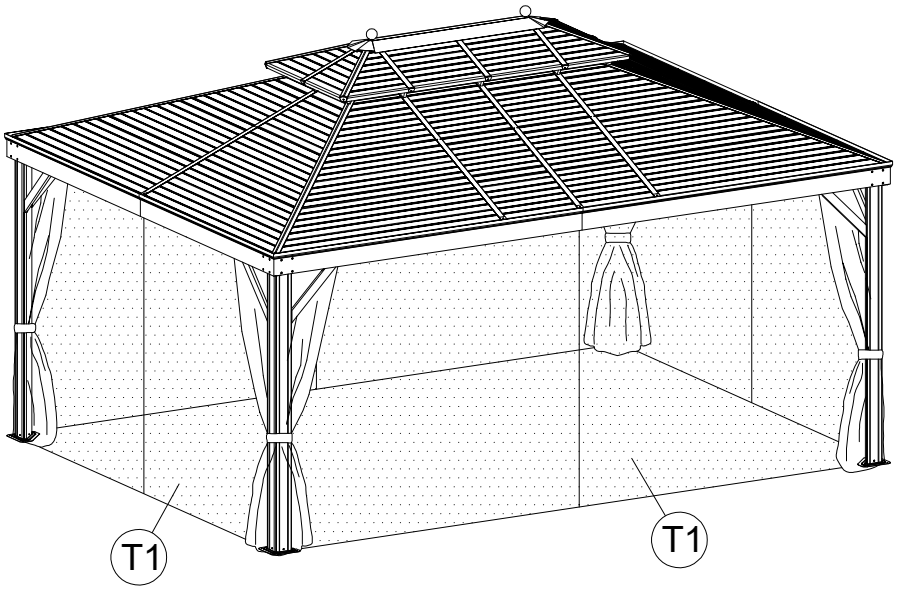


Tips: When installing nettings, you can first find the tie for the netting, and then hang the netting according to the hole number on the left and right sides of the tie.

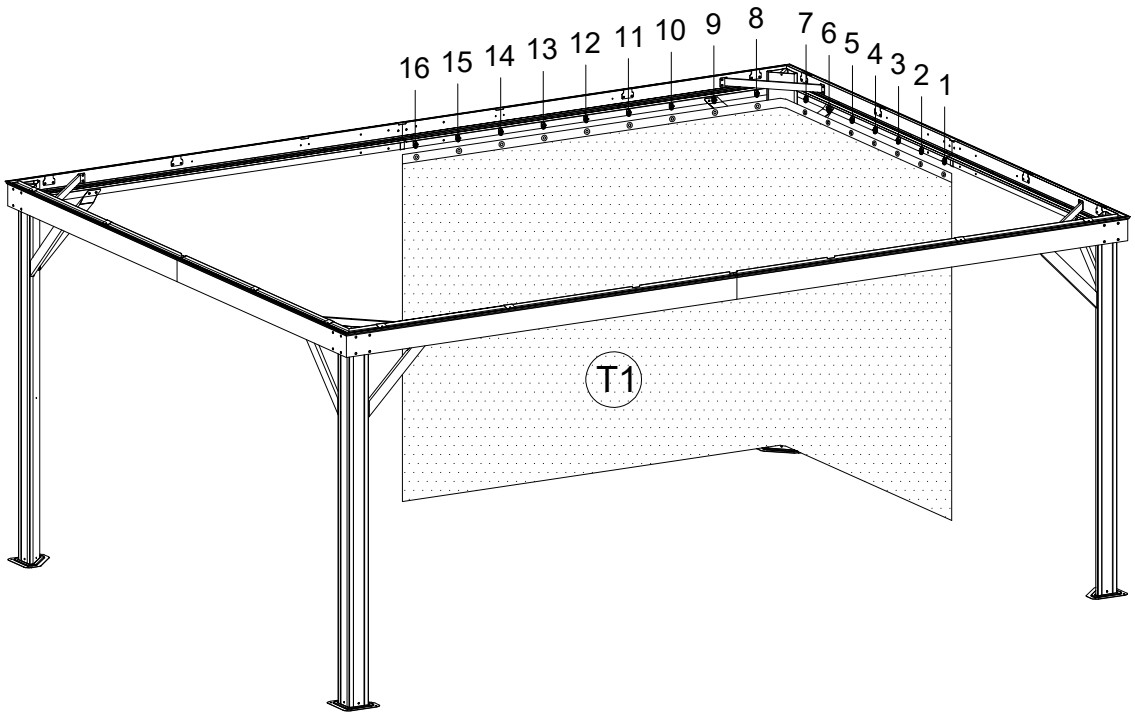

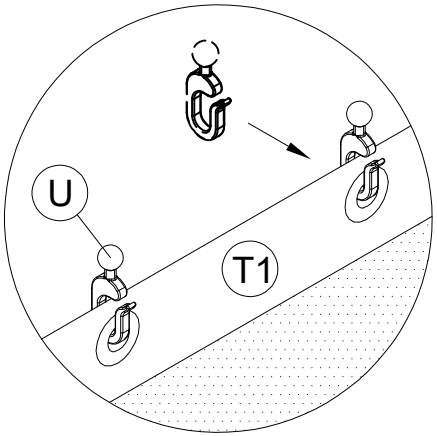




T1 x1





9 x12


Tips: The gazebo is already installed. Please determine where the gazebo will be placed and fix it with screws. If the floor on which the gazebo will be installed is concrete, it can be fixed with the expansion screws provided in the package.


<35>

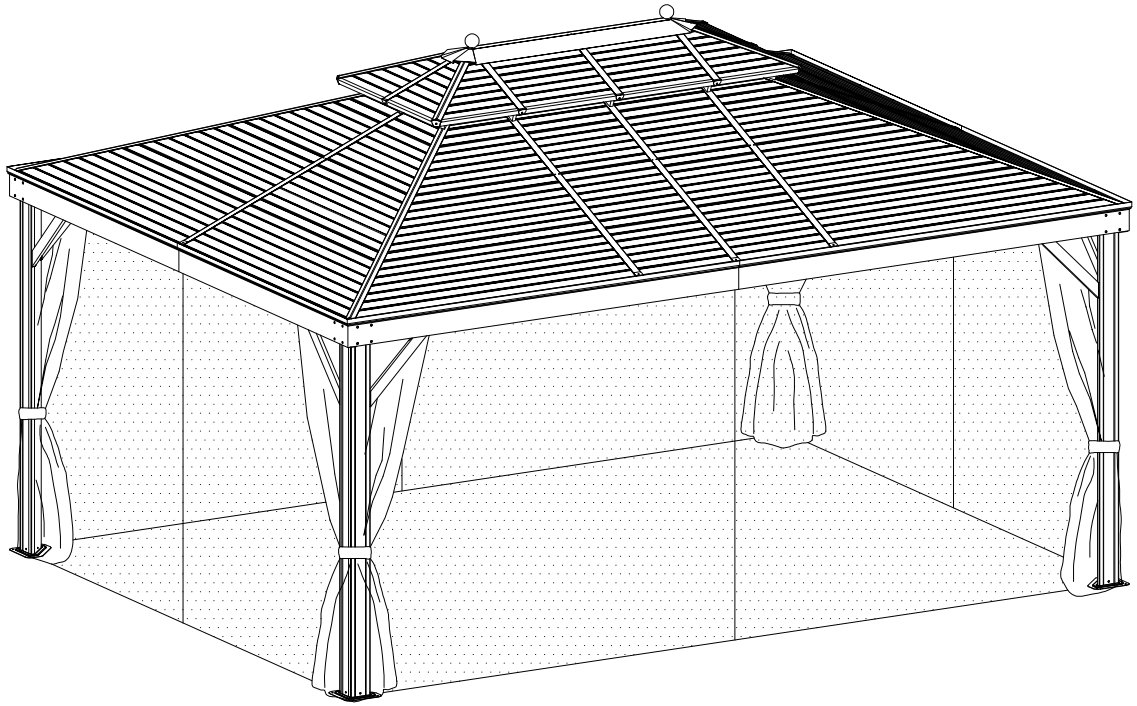

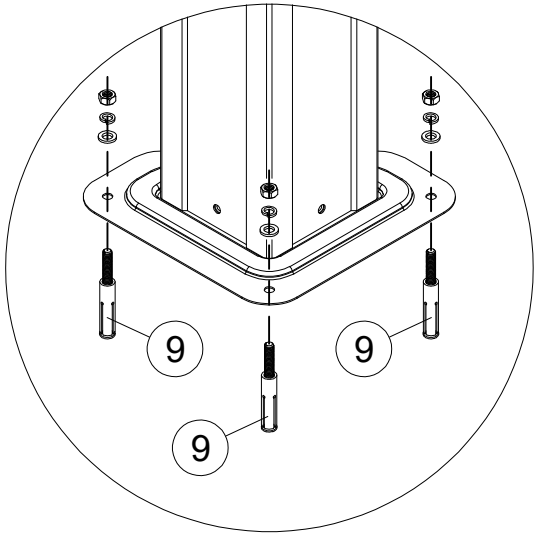

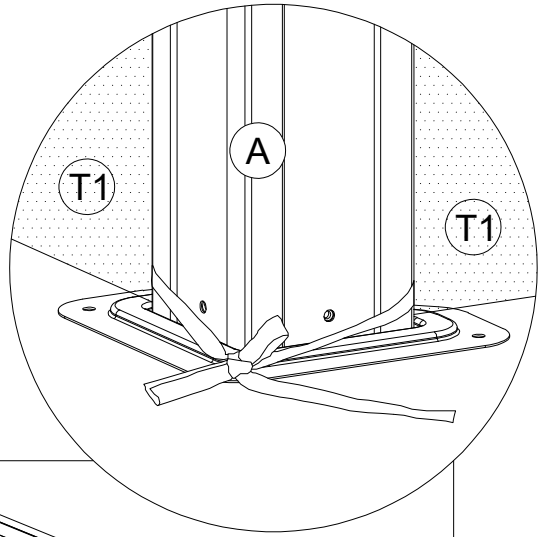

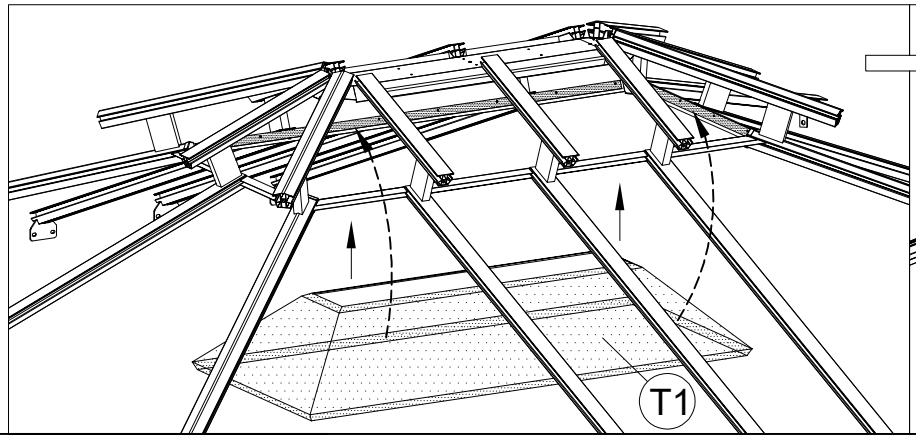

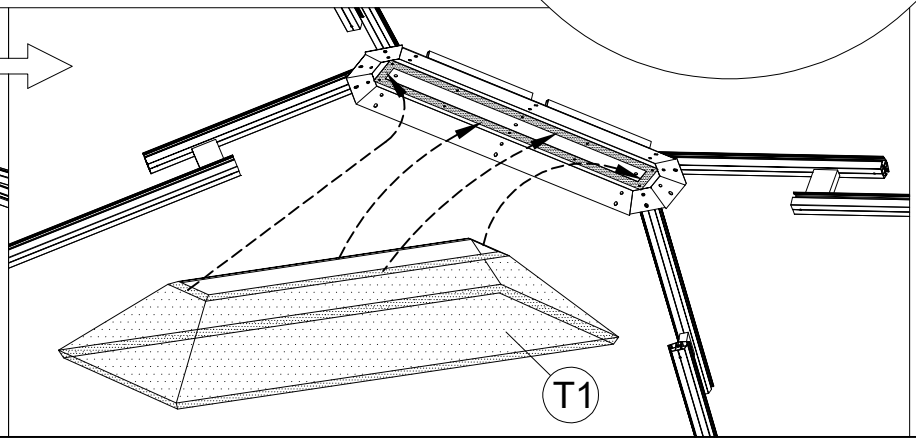

Carton-1/7	
Part	Qty
A	4

Carton-2/7	
Part	Qty
B2	2
B3	2
D2	2
D3	2

Carton-3/7	
Part	Qty
E1	8
H	4
H1	4
H2	4
P	4
T	4
U4	8

Carton-4/7	
Part	Qty
C2	2
C3	2
E	4
F	8
G3	2
G4	2
J	4
K	4
U3	4
W1	16
Za	2
N.N1.N2.N3.N4 U.V.W.Y.Y1.9.10	1

Carton-5/7	
Part	Qty
B	2
B1	2
C	2
C1	2
D	2
D1	2
G	2
G1	4
G2	4
L	1
M	1
T1	4+1
1.2.3.4.5.6.7	1

Carton-6/7	
Part	Qty
Q1	4
Q2	4
Q3	4
Q4	4
Q5	4
Q6	4

Carton-7/7	
Part	Qty
Q	12
R	4
R1	4
R2	4
S	4
S1	4
S2	4